PIONEER®
The future of sound and vision.

Service Manual

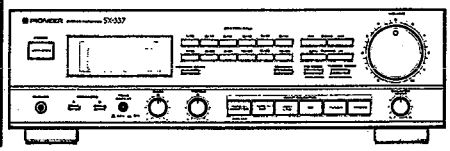

ORDER NO.
ARP2014

STEREO RECEIVER

SX-337

MODEL SX−337 HAS FOLLOWING VERSIONS :

Type	Power requirement	Export destination
HE	AC220V, 240V (Switchable)*	European continent
HB	AC220V, 240V (Switchable)*	United Kingdom
HEWZ	AC220V, 240V (Switchable)*	West Germany

* Change the lead wires of the power transformer.

- This manual is applicable to the SX−337/HE, HB and HEWZ types.
- As to the HEWZ type, refer to pages 30−46.
- Ce manuel pour le service comprend les explications en français de réglage.
- Este manual de servicio trata del método ajuste escrito en español.

CONTENTS

1. SPECIFICATIONS 2
2. EXPLODED VIEWS, PACKING AND PARTS LIST 3
3. SCHEMATIC DIAGRAM 7
4. P.C.BOARD CONNECTION DIAGRAM 11
5. P.C.B 's PARTS LIST 19
6. ADJUSTMENTS 23
7. FOR HEWZ TYPE 30
8. PANEL FACILITIES 47

PIONEER ELECTRONIC CORPORATION 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153, Japan
PIONEER ELECTRONICS SERVICE INC. P.O. Box 1760, Long Beach, California 90801 U.S.A.
PIONEER ELECTRONICS OF CANADA, INC. 505 Cochrane Drive, Markham, Ontario L3R 8E3 Canada
PIONEER ELECTRONIC [EUROPE] N.V. Keetberglaan 1, 2740 Beveren, Belgium
PIONEER ELECTRONICS AUSTRALIA PTY. LTD. 178-184 Boundary Road, Braeside, Victoria 3195, Australia TEL: [03] 580-9911

© PIONEER ELECTRONIC CORPORATION 1990

YA APR. 1990 Printed in Japan,

1. SPECIFICATIONS

Amplifier Section

Continuous Power Output (both channels driven, DIN)
- 1 kHz, T.H.D. 1%, 4 Ω ..... 80 W + 80 W
- 1 kHz, T.H.D. 1%, 8 Ω ..... 65 W + 65 W
- 20 Hz – 20 kHz, T.H.D. 0.07%, 8 Ω ..... 50 W + 50 W

IEC power output
- 63 Hz – 12.5 kHz, T.H.D. 0.7%, 4 Ω ..... 74 W + 74 W
- 63 Hz – 12.5 kHz, T.H.D. 0.7%, 8 Ω ..... 63 W + 63 W

Dynamic power output

2/4/8 Ω ..... 120/110/80 W

Total Harmonic Distortion*
- 1 kHz, 50 W, 8 Ω 0.01%

Input (Sensitivity/Impedance)
- PHONO ..... 2.5 mV/47 kΩ
- CD, VCR/LINE, TAPE 1/DAT, TAPE 2 .....150 mV/22 kΩ

Phono Overload Level (T.H.D. 0.01%, 1,000 Hz)
- PHONO ..... 130 mV

Output (Level/Impedance)
- TAPE REC ..... 150 mV/2,2 kΩ

Frequency Response
- PHONO (RIAA Equalization) ..... 20 Hz to 20,000 Hz ±0.5 dB
- CD, VCR /LINE, TAPE 1/DAT, TAPE 2 ..... 10 Hz to 70,000 Hz $^{+0.5}_{-3.0}$dB

Signal-to-Noise Ratio (DIN, continuous power/50 mW)
- PHONO ..... 68 dB/59 dB
- CD, VCR/LINE, TAPE 1/DAT, TAPE 2 ..... 86 dB/60 dB

Tone control
- BASS ..... ±8dB (100Hz)
- TREBLE ..... ±8dB (10kHz)

FM Tuner Section

Frequency range ..... 87.5 MHz to 108 MHz

Usable Sensitivity ..... 10.8 dBf, IHF (0.95 μV/75 Ω)

50 dB Quieting Sensitivity
- MONO ..... 15.3 dBf (1.6 μV/75 Ω)
- STEREO ..... 37.1 dBf (19.5 μV/75 Ω)

Sensitivity (DIN)
- MONO ..... 0.9 μV/75 Ω
- STEREO ..... 29 μV/75 Ω

Signal-to-Noise Ratio
- MONO ..... 78 dB (at 85 dBf)
- STEREO ..... 75 dB (at 85 dBf)

Signal-to-Noise Ratio (DIN)
- MONO ..... 66 dB
- STEREO ..... 66 dB

Distortion
- STEREO ..... 0.3% (1 kHz)

Alternate Channel Selectivity ..... 55 dB (400 kHz)

Stereo Separation ..... 35 dB (1 kHz)

Frequency Response ..... 30 Hz to 15 kHz (± 1 dB)

Antenna Input ..... 300 Ω balanced, 75 Ω unbalanced

AM Tuner Section

Frequency range ..... 531 kHz to 1,602 kHz

Sensitivity
- IHF, Loop antenna ..... 300 μV/m

Selectivity ..... 20 dB

Signal-to-Noise Ratio .....50 dB

Antenna ..... AM Loop Antenna

Miscellaneous

Power Requirements ..... a.c. 240 Volts ~, 50/60 Hz

Power Consumption ..... 470 Watts

Dimensions ..... 420 (W) x 125 (H) x 339 (D) mm

Weight (without package) ..... 7.0 kg

Furnished Parts

FM T-type Antenna 1

AM Loop Antenna 1

Operating Instructions 1

NOTE:

Specifications and design subject to possible modification without notice due to improvements.

* Measured by audio spectrum analyzer.

2. EXPLODED VIEWS, PACKING AND PARTS LIST

NOTES:
- *Parts without part number cannot be supplied.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Parts marked by "◉" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.*

Parts list of Exterior

Mark	No.	Description	Parts No.
	1	VOL KNOB	AAB1152
	2	ROTARY KNOB S	AAB1154
	3	PUSH KNOB	AAD−418
	4	POWER KNOB	AAD1535
	5	KNOB AREY	AAD1539
	6	PUSH KNOB	AAD1771
	7	FL FILTER	AAK1674
	8	ACRYLIC PANEL	
	9	.....	
	10	NAME PLATE (METAL)	AAM1029
	11	COMPLEX assembly	AWZ2386
	12	CONTROL assembly	AWZ2872
	13	SCREW	ABA−298
	14	SCREW(STEEL)	ABA1006
	15	SCREW(STEEL)	ABA1009
	16	SCREW(STEEL)	ABA1011
	17	SCREW(STEEL)	ABA1048
	18	SCREW	ABA1052
	19	SCREW	ABA1054
	20	SCREW	ABA1082
	21	SPRING	ABH−052
	22	NUT	ABN−065
⚠	23	AC POWER CORD(HE type)	ADG1021
⚠	23	AC POWER CORD(HB type)	ADG−063
	24	FM ANTENNA	ADH1004
	25	SP SWITCH assembly	
	26	BINDER	
	27	SHEET	AEE1014
	28	STYROL PROTECTOR	AHA1015
	29	PACKING CASE	AHD1822
	30	SHEET	AHG1016
	31	TERMINAL SCREW	
	32	PANEL BASE	AMB1460
	33	INSULATOR ASS'Y	AMR1434
	34	INSULATOR ASS'Y	AMR1435
	35	CHASSIS	
	36	FRONT PANEL	ANB1383
	37	REAR PANEL	
	38	METAL BONNET	AZN1785
	39	BOTTOM PLATE	
	40	HEAT SINK HOLDER	
	41	HEAT SINK	
	42	SHILD CASE	
	43	INSTRUCTION MANUAL (HE type)	ARE1152
	43	INSTRUCTION MANUAL (HB)type	ARB1233
	44	SP TERMINAL assembly	
	45	POWER SW assembly	
	46	SCREW	BBT30P060FZK
	47	SCREW	CBZ30P080FMC
	48	NUTS	NK70FUC
	49	NUT	NK90FUC
	50	SCREW	VMZ30P060FMC
⚠	51	FU1 FUSE(T2A)(HE type)	AEK−017
⚠	51	FU1 FUSE(T2A)(HB type)	AEK−511
	52	LOOP ANTENNA	ATB1005
⚠	53	Q1 TRANSISTOR	2SC3181N
⚠	54	Q2 TRANSISTOR	2SC3181N
⚠	55	Q3 TRANSISTOR	2SA1264N
⚠	56	Q4 TRANSISTOR	2SA1264N
⚠	57	T1 POWER TRANSFORMER	ATS1117

Exterior

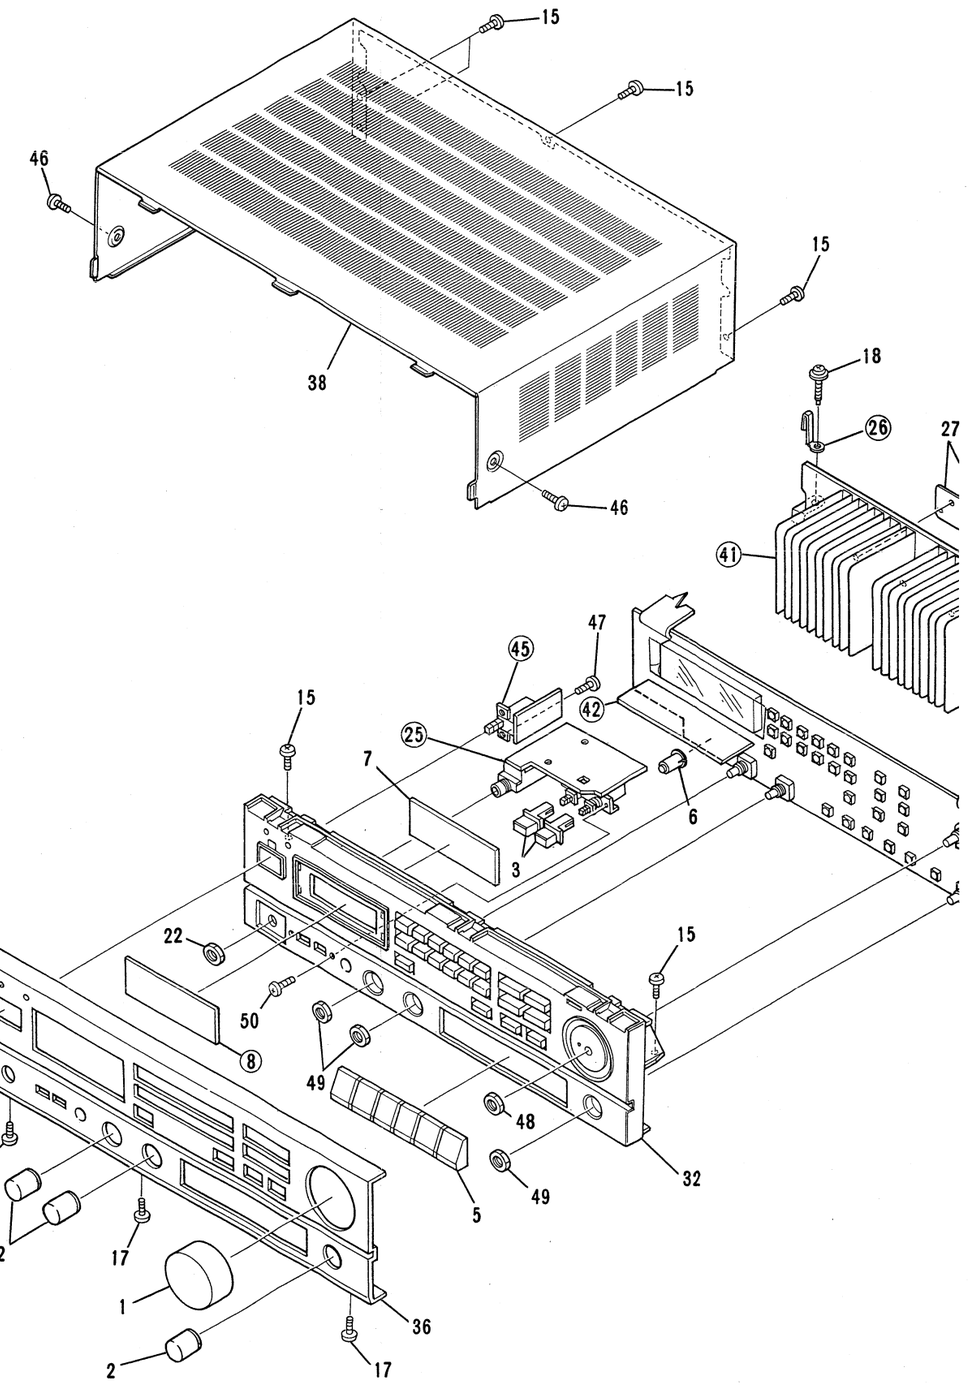

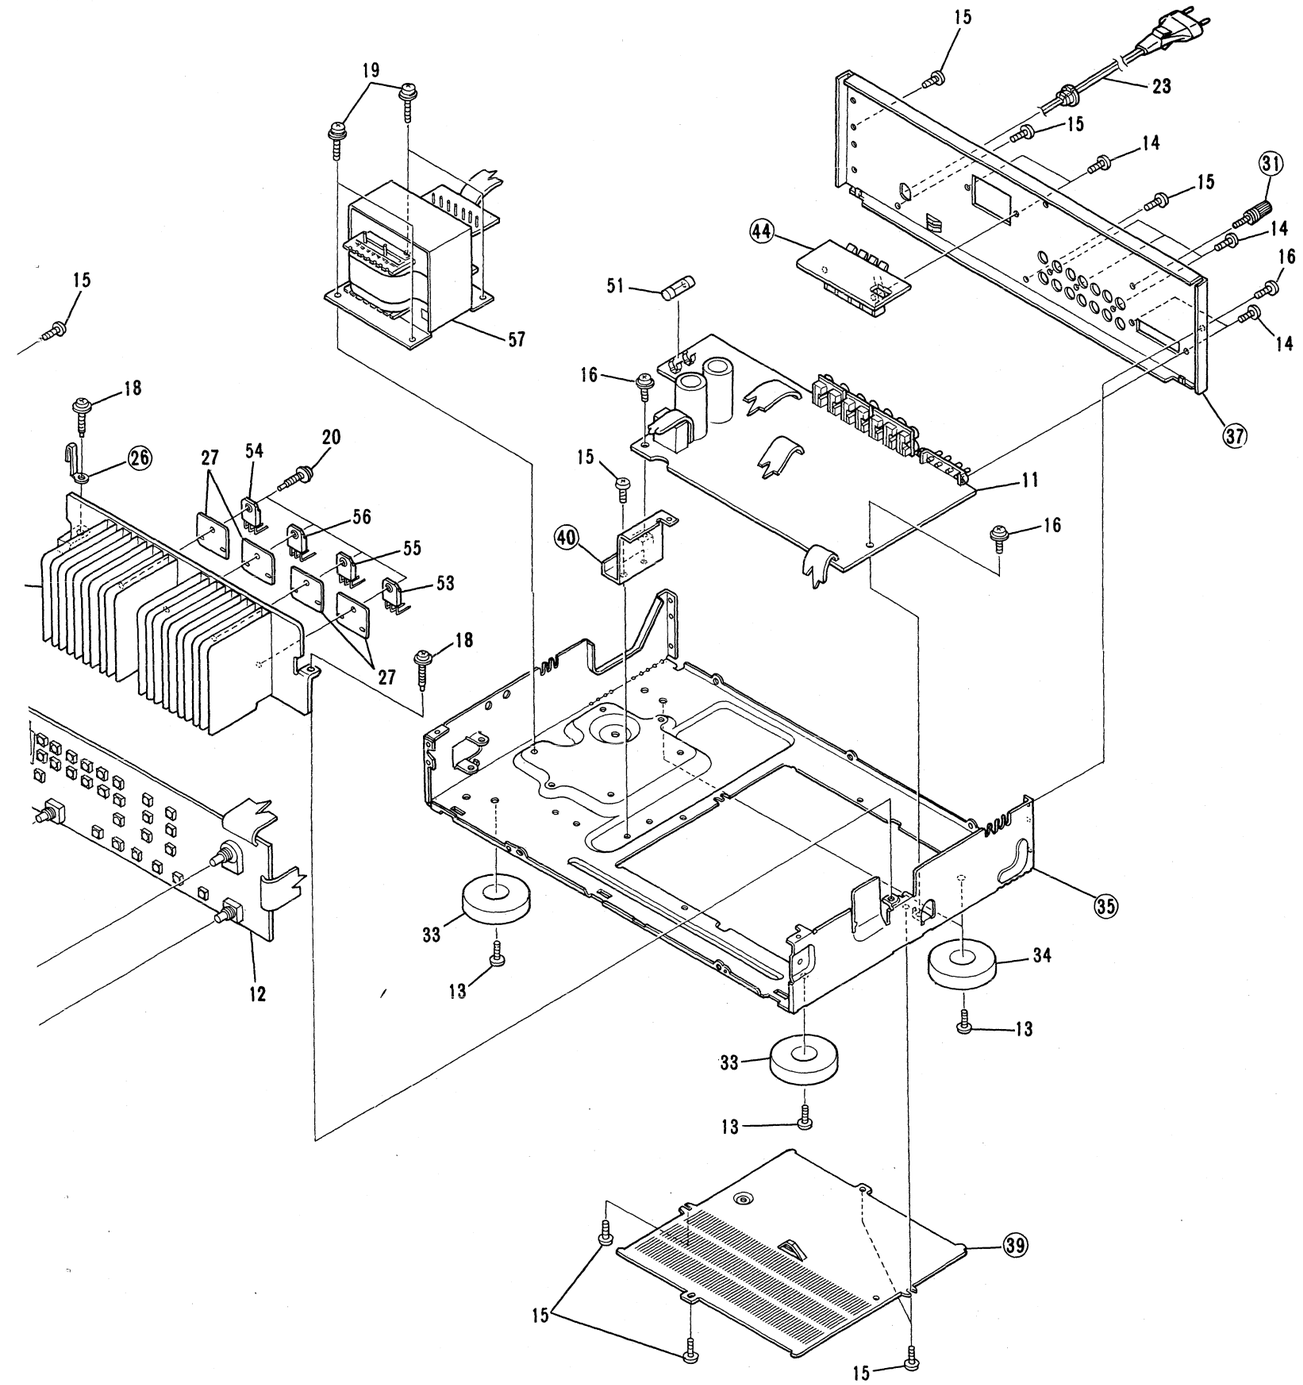
15
19
23
15
14
31
15
44
14
16
51
57
14
37
18
16
26
27
54
20
15
11
56
40
16
55
53
27
18
12
33
13
35
34
13
33
13
39
15
15

Packing

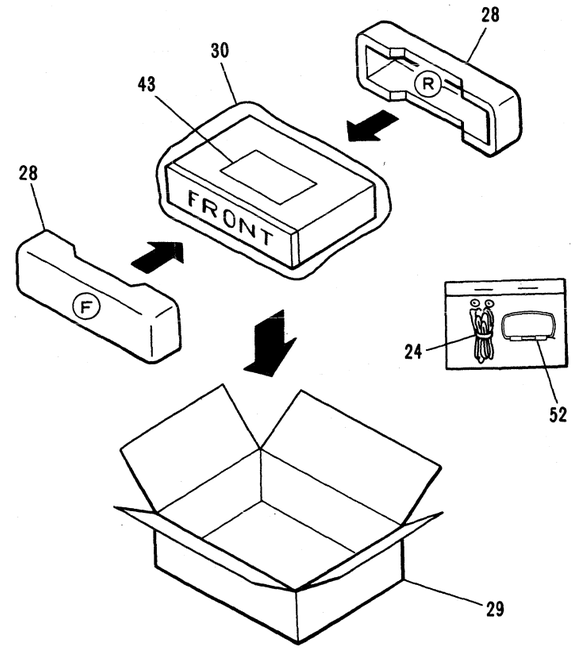
28
30
43
R
FRONT
28
F
24
52
29

3. SCHEMATIC DIAGRAM

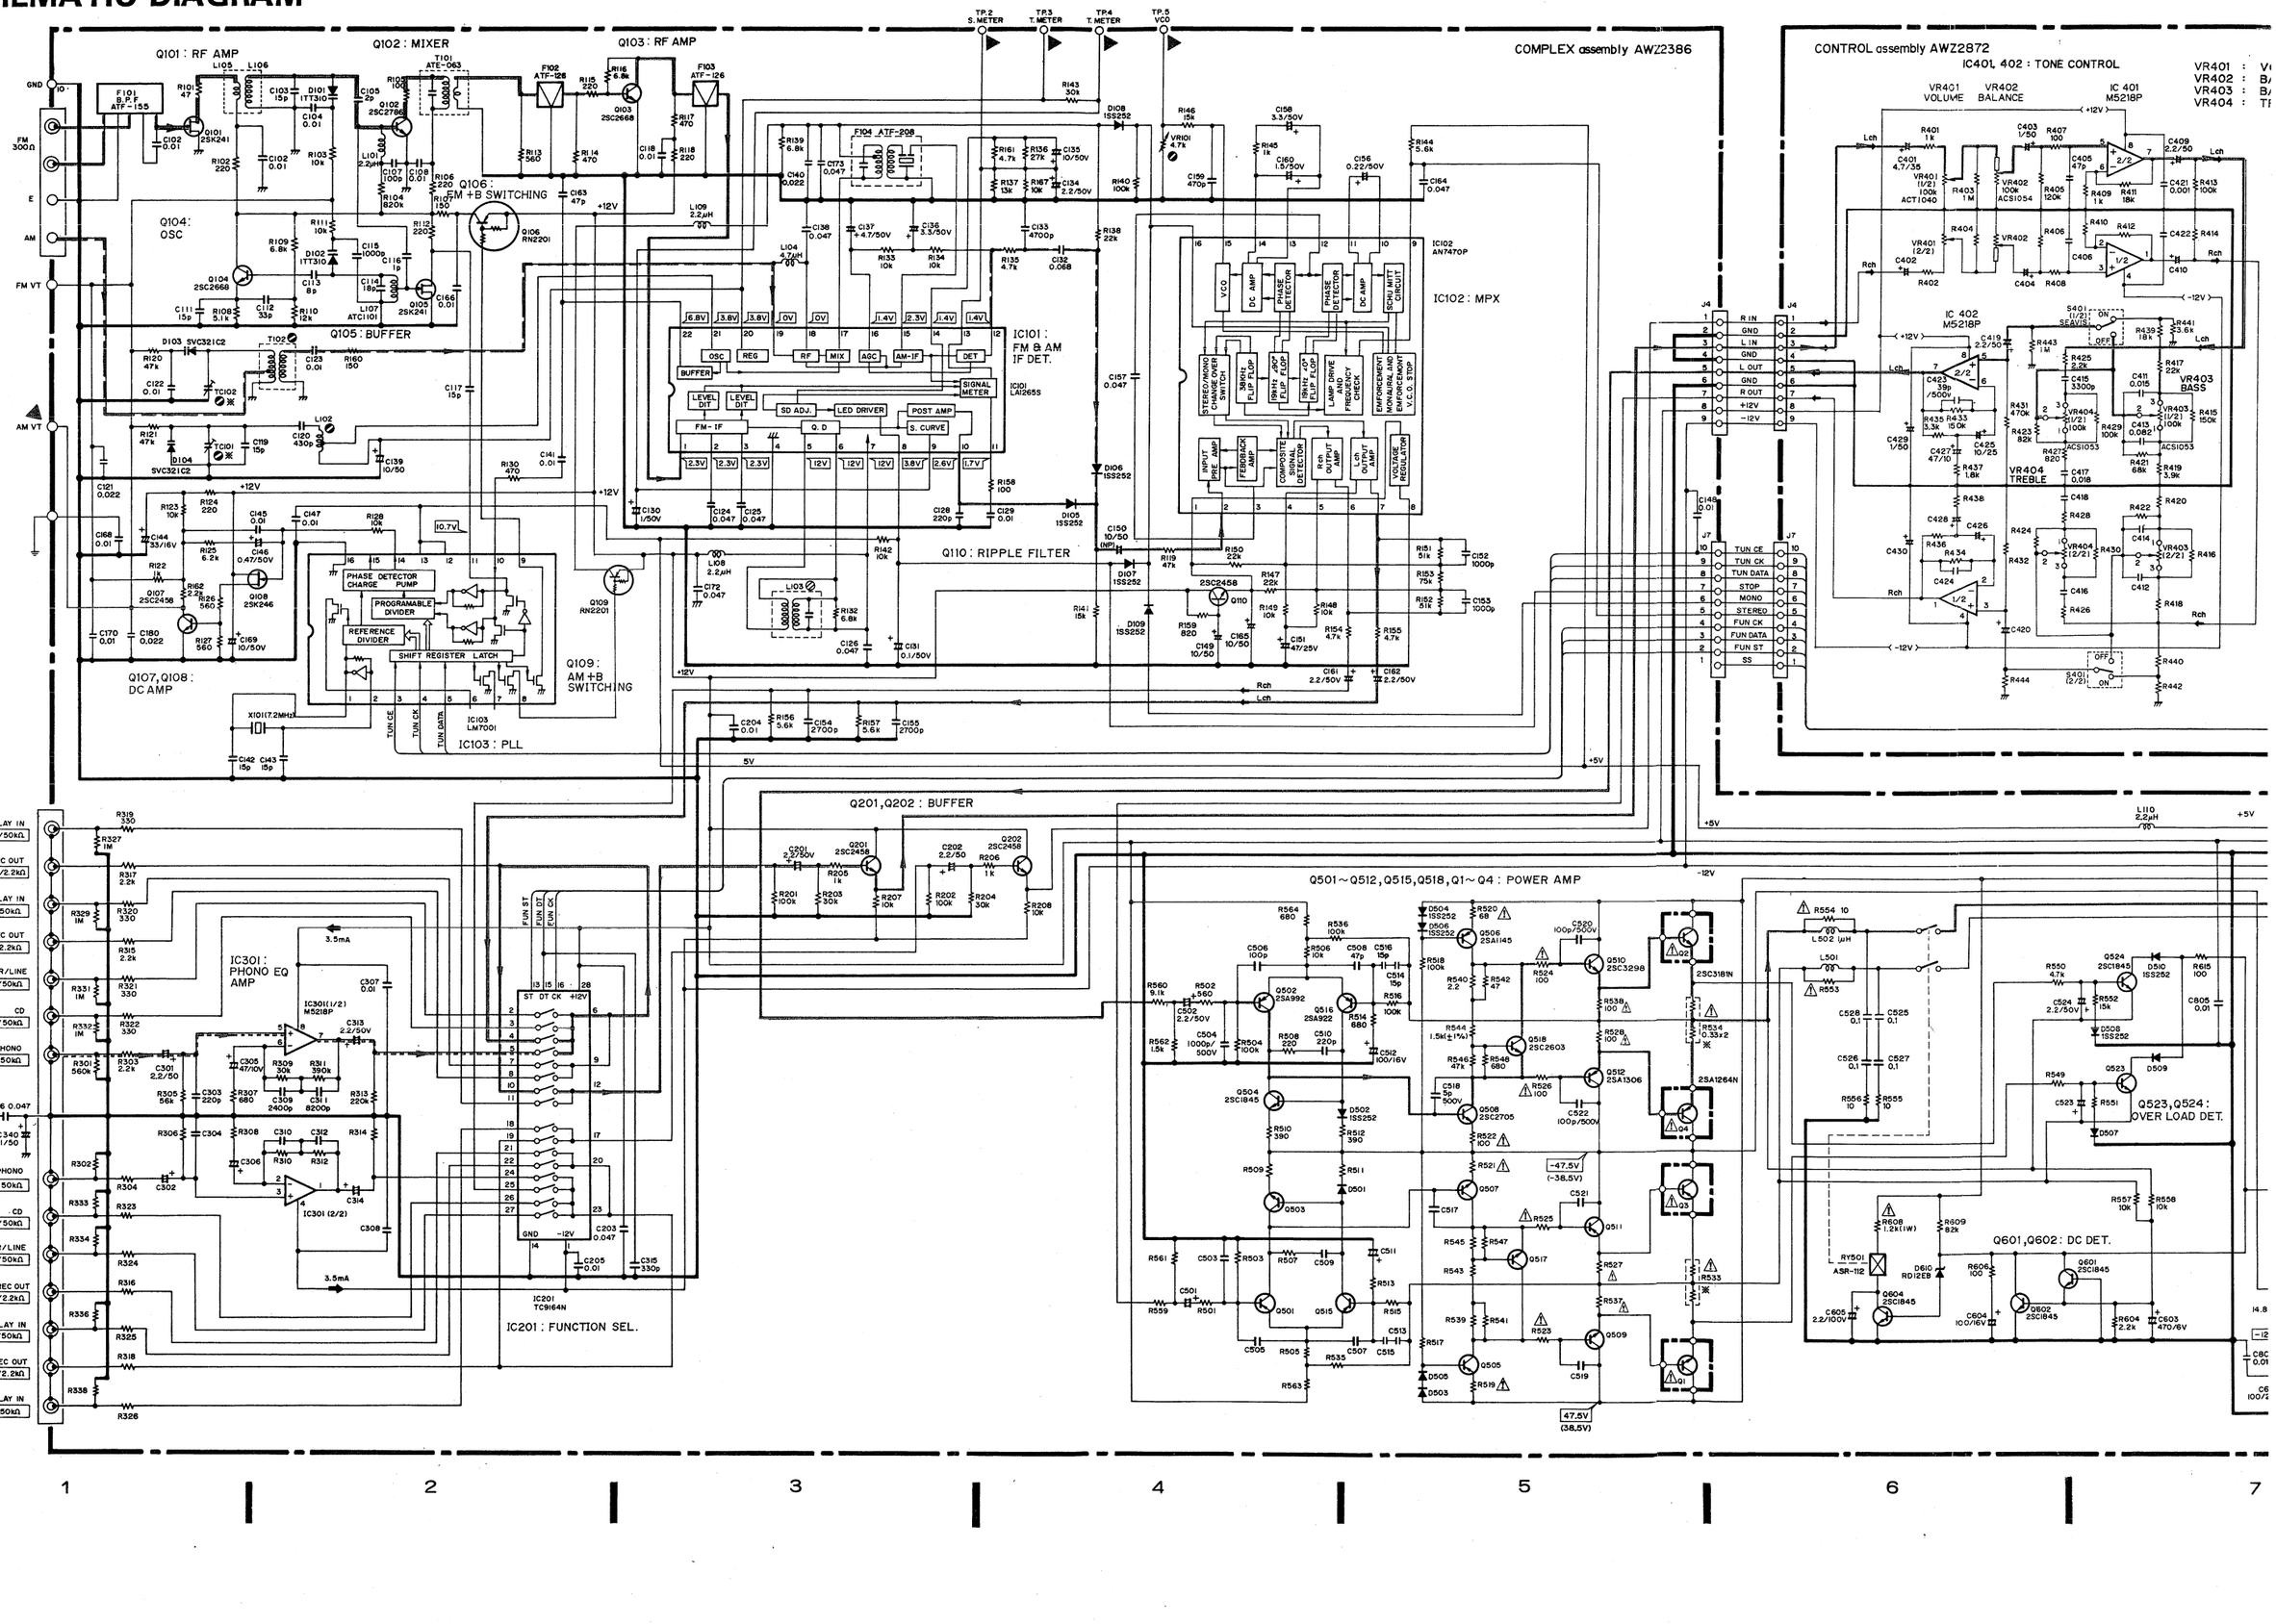

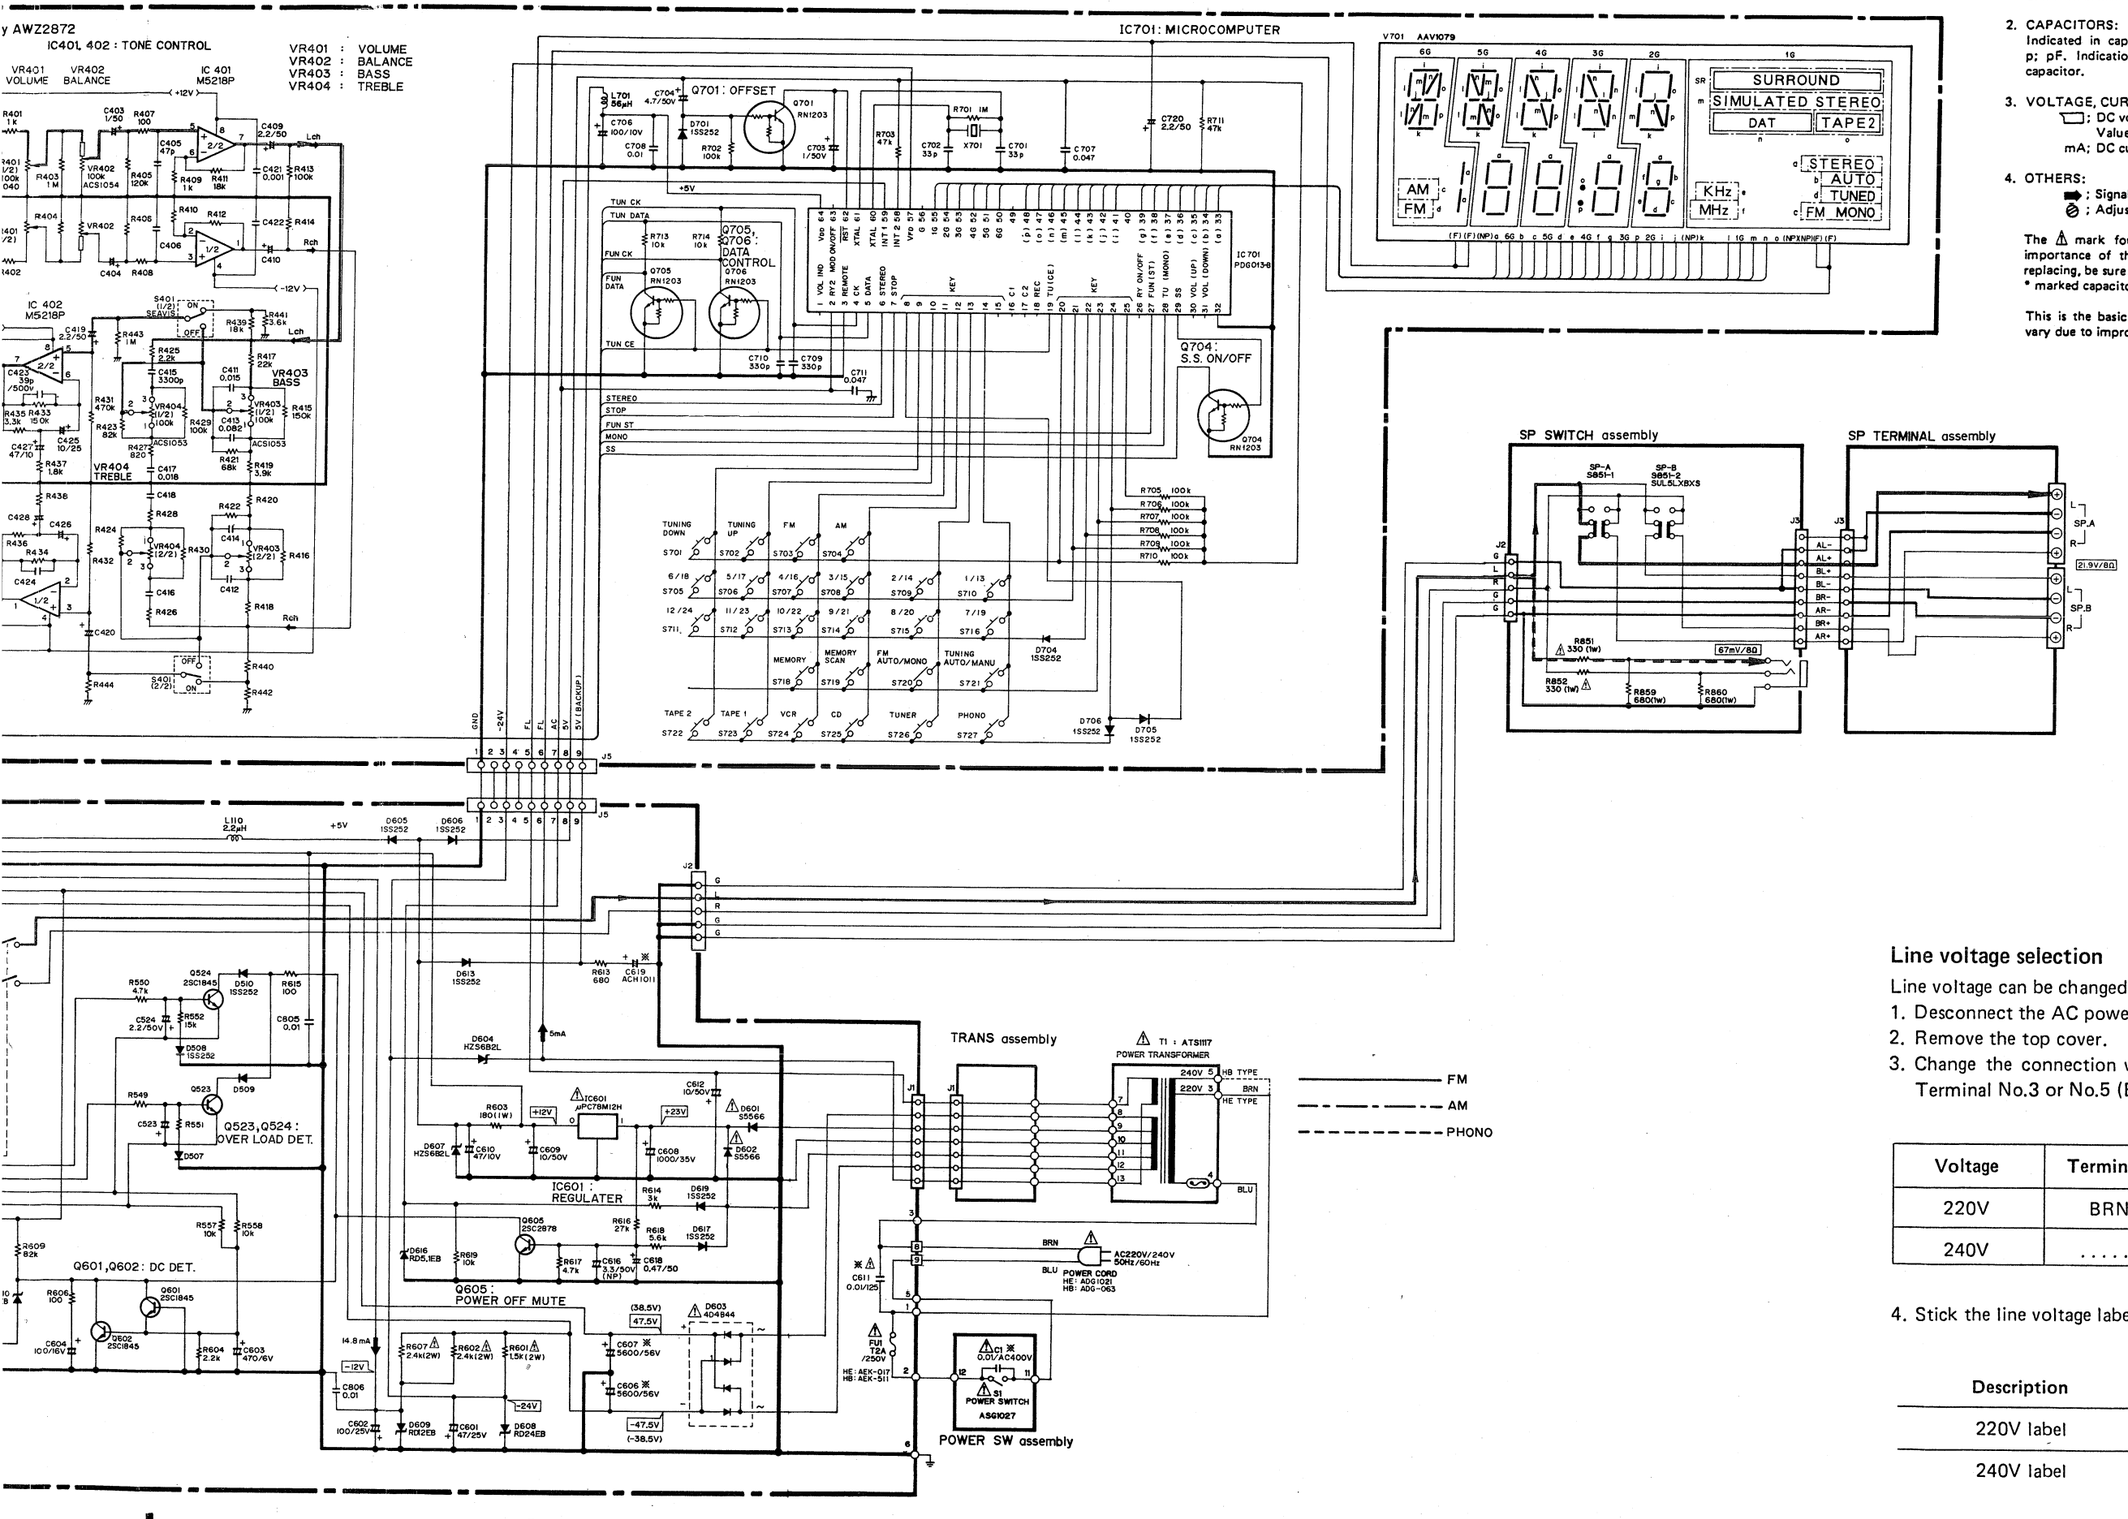

1. RESISTORS:
Indicated in Ω, 1/8W & 1/4W, ±5% tolerance unless otherwise noted k; kΩ, M; MΩ, (F); ±1%, (G); ±2%, (K); ±10%, (M); ±20% tolerance

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:
; DC voltage (V) at no input signal
Value in ( ) is DC voltage at rated power.
mA; DC current at no input signal

4. OTHERS:
; Signal route.
; Adjusting point.

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

Line voltage selection

Line voltage can be changed with following steps.
1. Desconnect the AC power cord.
2. Remove the top cover.
3. Change the connection wire (To Power transformer) of Terminal No.3 or No.5 (BRN) as follows.

Voltage	Terminal No. 3	Terminal No. 5
220V	BRN wire	.....
240V	.....	BRN wire

4. Stick the line voltage label on the rear panel.

Description	Part No.
220V label	AAX–193
240V label	AAX–192

4. P.C.BOARD CONNECTION DIAGRAM

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
Q504 (E C B)	E C B or E C B	Transistor
Q215 (C E B)	or	Radiator type transistor
D203	D203	Diode
R237	R237	Resistor
C513	+	Capacitor (Polarity)
C518		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capacitor terminal marked with ⊖(double circles) shows negatine termianl.
4. The diode terminal marked with ⊖(double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

SP TERMINAL assembly

SP SWITCH assembly

TRANS assembly

T1 POWER TRANSFORMER

4 8 9 10 11 12 13 7

3 220V

5 240V

CONTROL assembly(AWZ2872)

AWZ 2872

TEST

TAPE2 TAPE1 VCR CD TUNER PHONO

TUNING

BASS TREBLE BALANCE

VR403 VR404 VR401 VR402

IC701 IC402 IC401

Q701 Q704 Q705 Q706

POWER CORD
AC 220/240V 50/60Hz

IC601 Q605 Q601 Q602 Q604 Q524 Q523 Q510 Q516 Q506 Q502 Q504 Q508 Q512 Q202 Q201 IC201 Q515 Q505 Q501 Q503 Q509 IC102 Q507 Q511 Q518 Q517 IC301 Q110 Q102 IC101 Q101 Q103 Q105 Q104 Q106 Q107 Q108 IC103 Q109

VR101

COMPLEX assembly(AWZ2386)

ATTENTION POUR LES PRECAUTIONS CONTINUELLES CONTRE L'INCENDIE LES FUSIBLES A REPLACER DOIVENT ETRE LES MEME TYPES ET NORMES UNIQUEMENT.

CAUTION FOR CONTINUED PROTECTION AGAINST FIRE, REPLACEMENT FUSES SHOULD BE THE SAME TYPE AND RATINGS ONLY.

3.15A 125V

MONI TAPE2 REC MONI TAPE1 REC VCR L R CD L R PHONO L R ANTENNA

POWER SUPPLY PROTECTION

POWER AMP

FUNCTION

TC9164N

AN7470P

MPX

AWZ 2386

AM FM IF

LA1265S

FM/AM IF

AMP1287-C

LM7001

PHONO EQ

TP1 TP2 TP5

POWER SW assembly

Q2 Q4 Q3 Q1

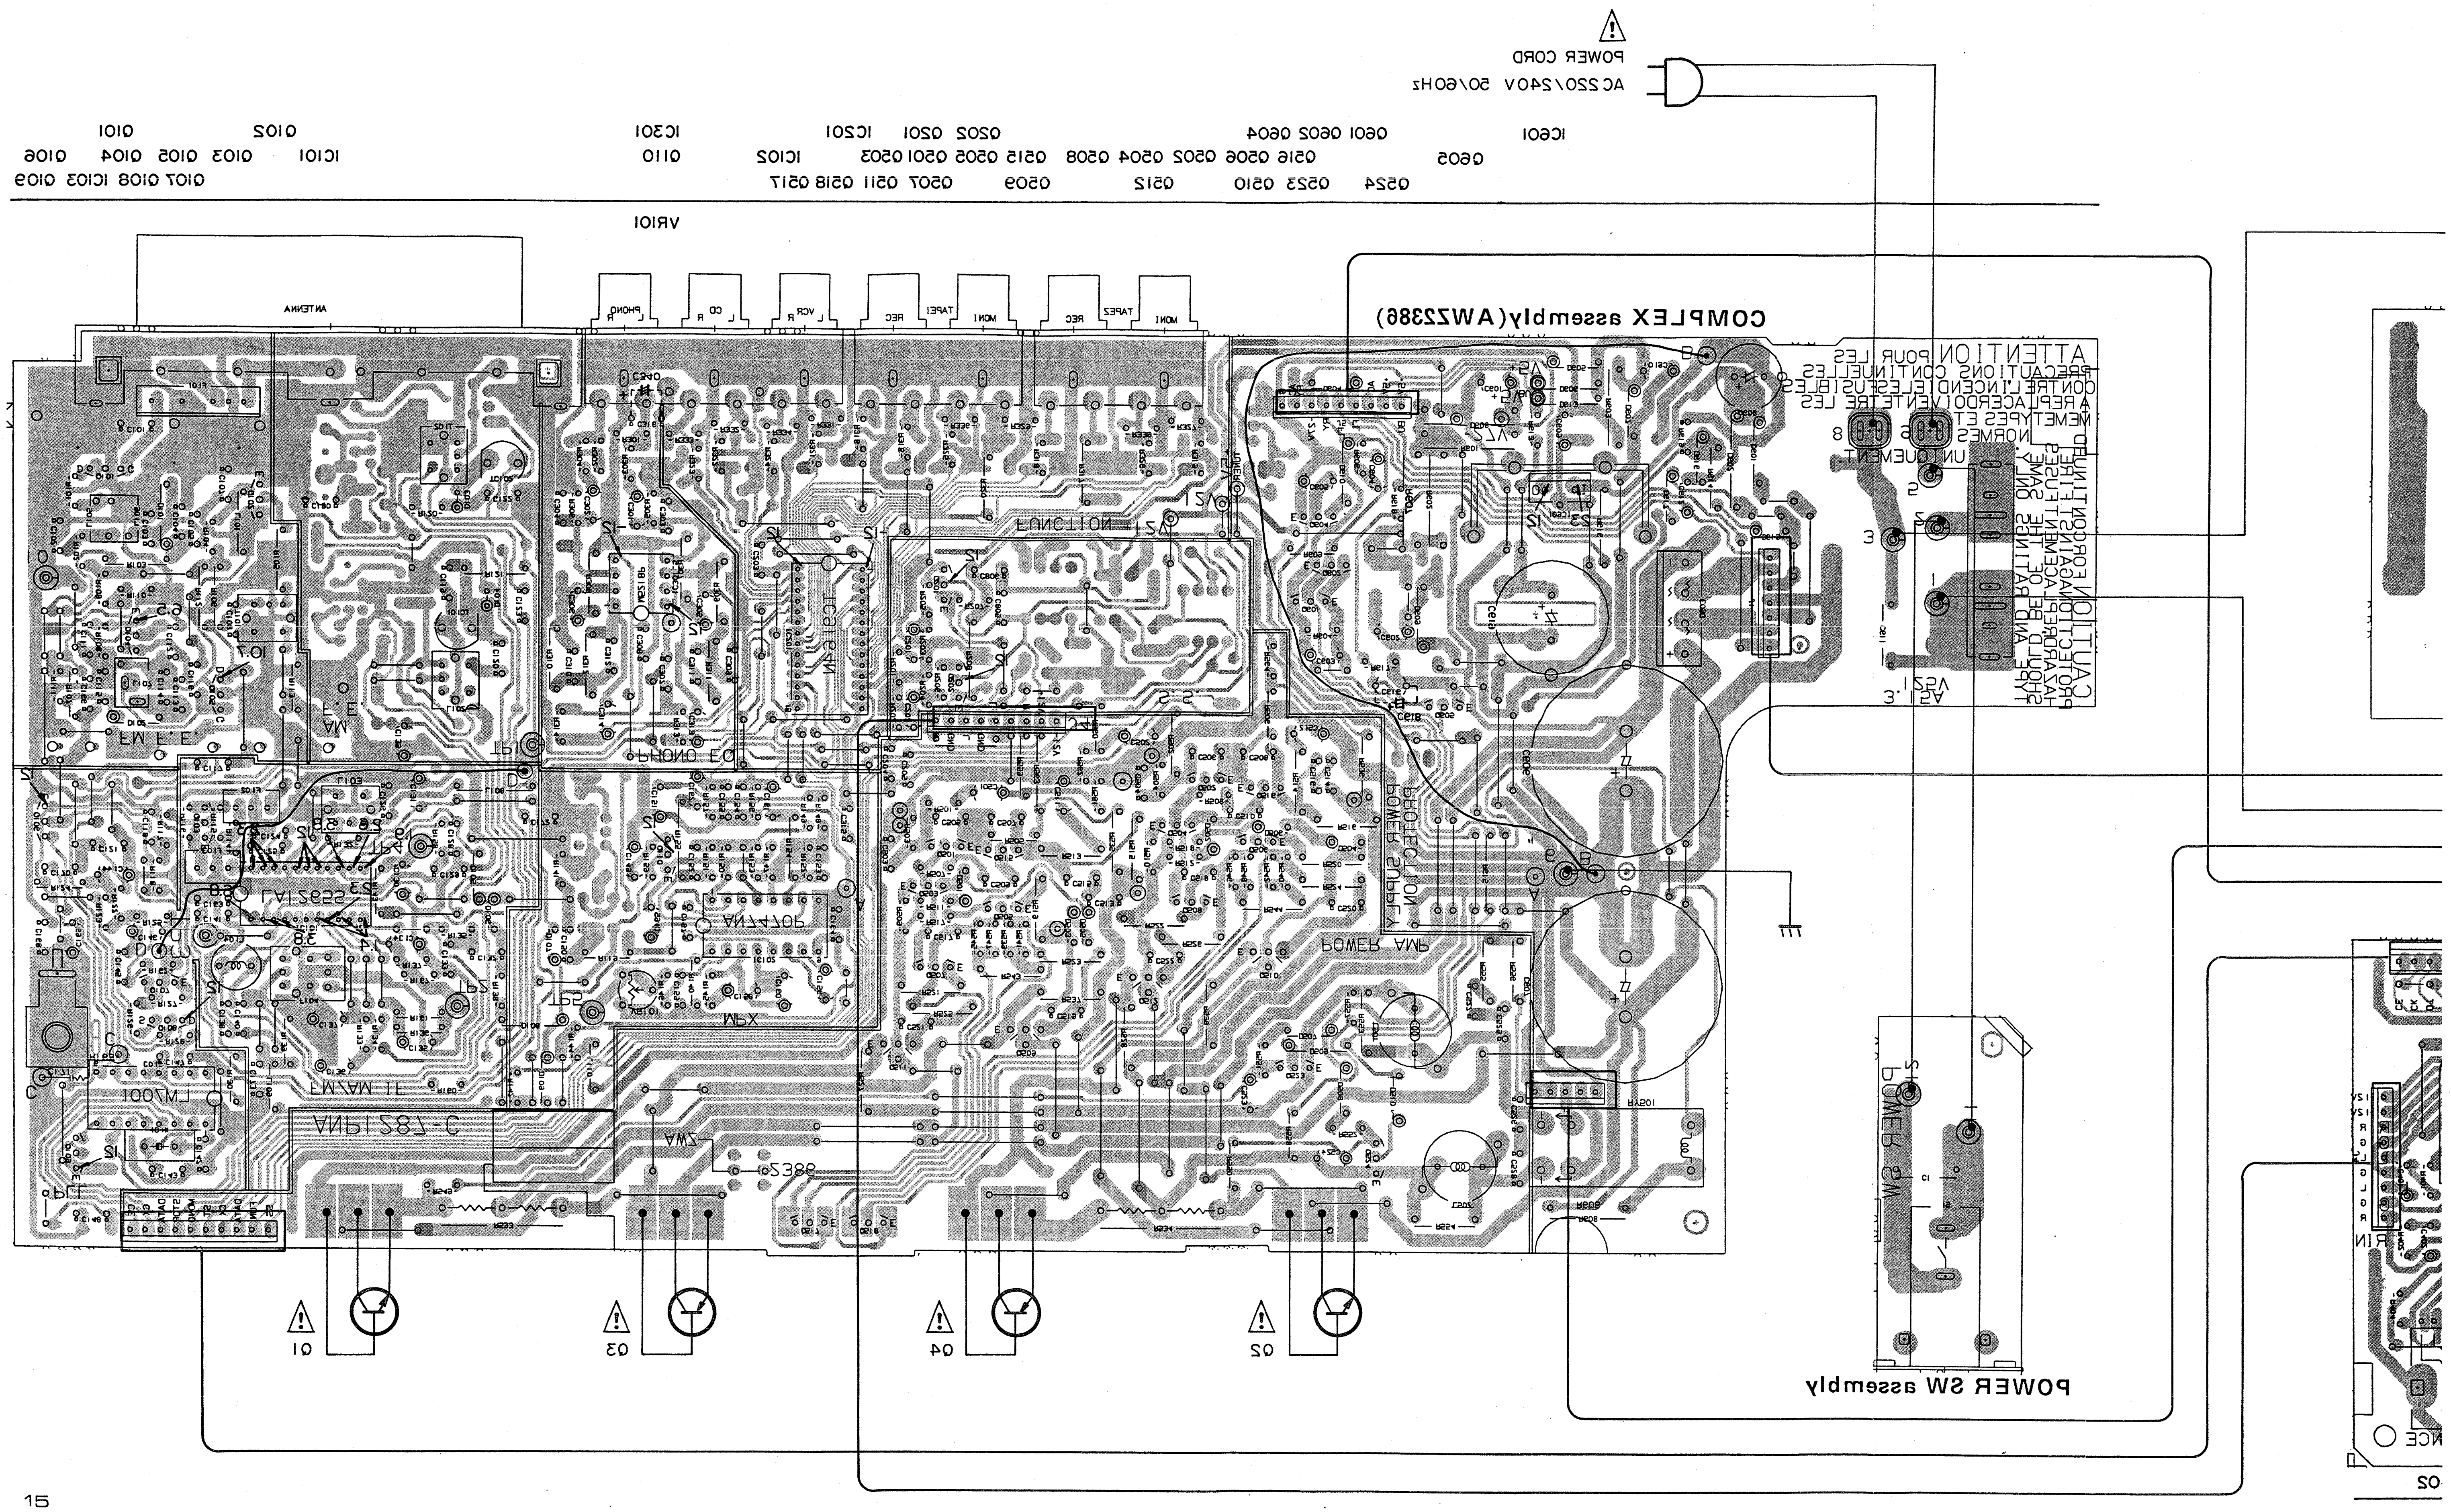
POWER CORD
AC220/240V 50/60Hz
Q101 Q102
Q106 Q104 Q105 Q103 IC101
Q109 IC103 Q108 Q107
IC301
Q110
VR101
IC201 Q201 Q202
IC102
Q503 Q501 Q505 Q515 Q508 Q504 Q502 Q506 Q516
Q517 Q518 Q511 Q507 Q509 Q512 Q510 Q523 Q524
Q601 Q602 Q604
Q605
IC601
ANTENNA
PHONO
CD
VCR
TAPE1 REC MONI
TAPE2 REC MONI
COMPLEX assembly(AWZ2386)
ATTENTION POUR LES PRECAUTIONS CONTINUELLES CONTRE L'INCENDIE LES FUSIBLES A REPLACER DOIVENT ETRE LES MEME TYPES ET NORMES UNIQUEMENT
CAUTION FOR CONTINUED PROTECTION AGAINST FIRE HAZARD, REPLACE ONLY WITH SAME TYPE AND RATINGS OF FUSE
FUNCTION
PHONO EQ
FM F.E.
AM F.E.
LA1265S
AN7470P
MPX
FM/AM IF
LM7001
PLL
ANP1287-C
AWZ
POWER AMP
POWER SUPPLY
PROTECTION
RY501
POWER SW
POWER SW assembly
Q1
Q3
Q4
Q2

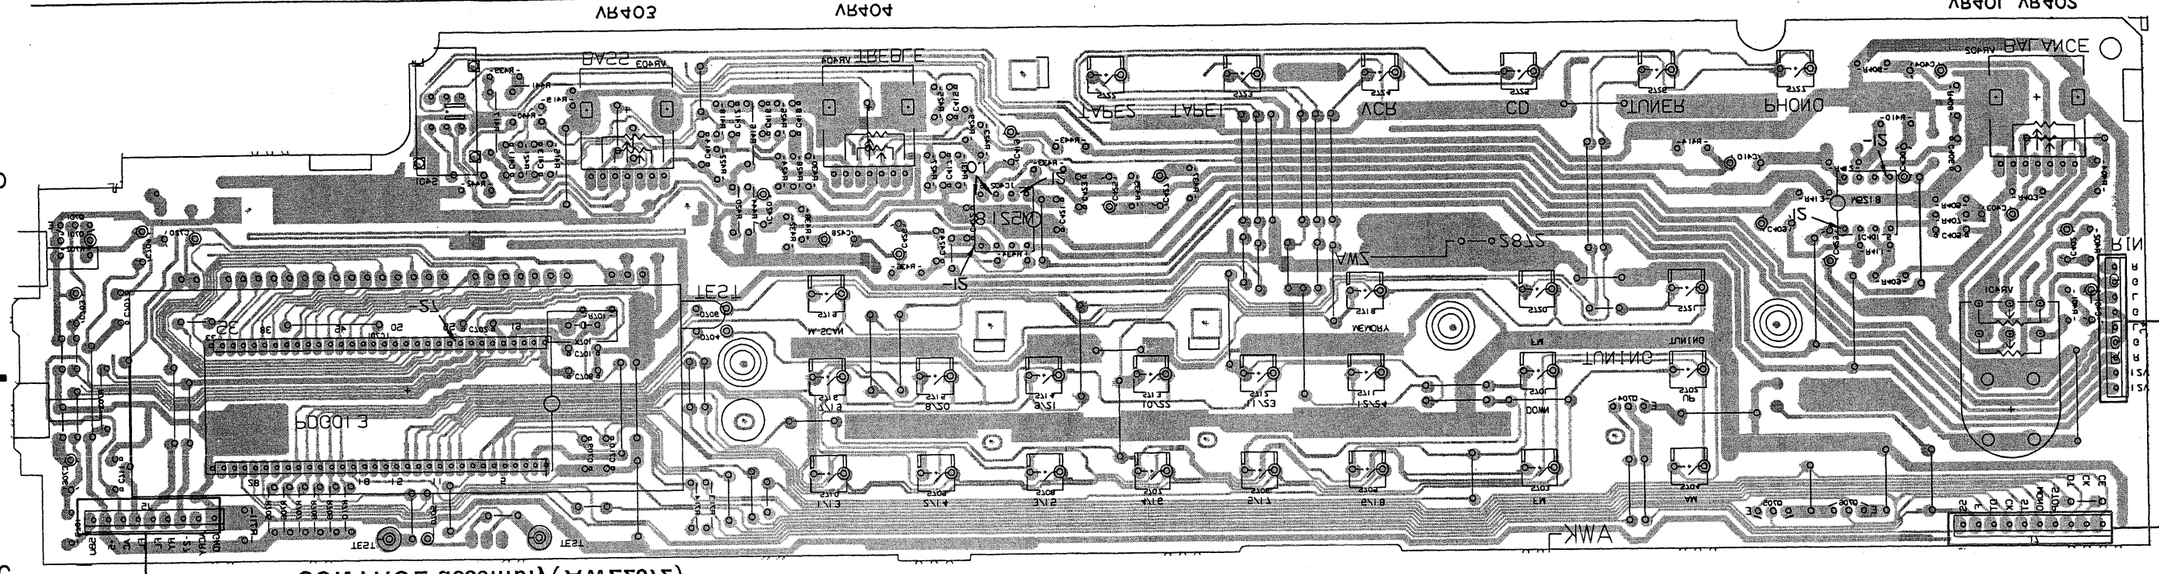

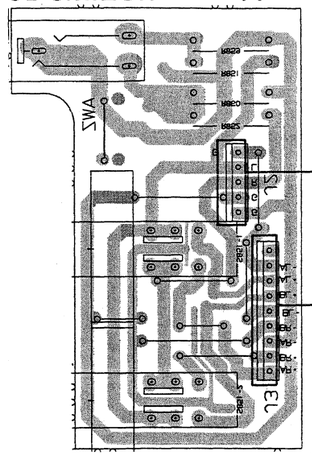

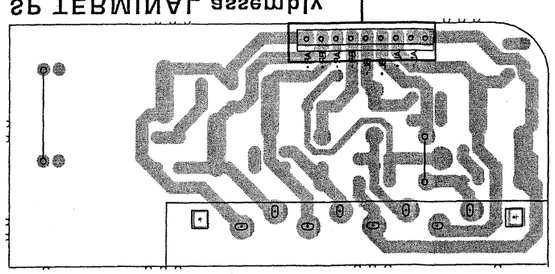

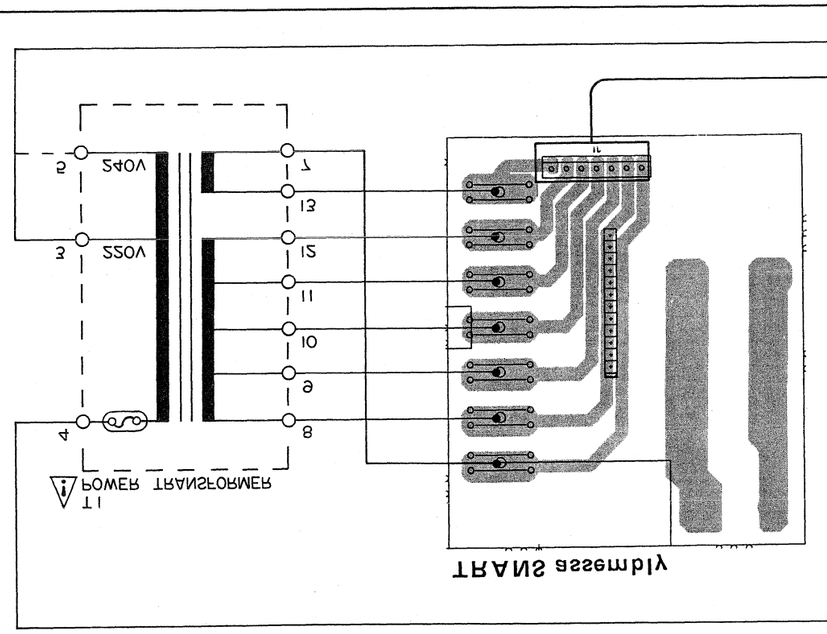

NOTE:
This picture shows the foil side of the printed circuit.

5. P.C.B 's PARTS LIST

NOTES:

- *Parts without part number cannot be supplied.*
- *Parts marked by "◉" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *When ordering resistors, first convert resistance values into code form as shown in the following examples.*

Ex. 1 When there are 2 effective digits (any digit apart from 0), such as 560 ohm and 47k ohm (tolerance is shown by J = 5%, and K = 10%).

560Ω	*56 × 10¹*	*561*	*RD1/4PS 5 6 1 J*
47kΩ	*47 × 10³*	*473*	*RD1/4PS 4 7 3 J*
0.5Ω	*0R5*		*RN2H 0 R 5 K*
1Ω	*010*		*RS1P 0 1 0 K*

Ex. 2 When there are 3 effective digits (such as in high precision metal film resistors).

5.62kΩ	*562 × 10¹*	*5621*	*RN1/4SR 5 6 2 1 F*

Mark	No.	Description	Parts No.
COMPLEX ASS'Y (AWZ2386)			
SEMICONDUCTORS			
	IC101	AM/FM IC	LA1265S
	IC102	MPX IC	AN7470P
	IC103	PLL IC	LM7001
	IC201	E−SW IC	TC9164N
	IC301	OP−AMP IC	M5218P
	IC601	REGURATOR IC	UPC78M12H
	Q101	MOS−FET	2SK241
	Q102	TRANSISTOR	2SC2786
	Q103,104	TRANSISTOR	2SC2668
	Q105	MOS−FET	2SK241
	Q106	TRANSISTOR	RN2201
	Q107	TRANSISTOR	2SC2458
	Q108	N−FET	2SK246
	Q109	TRANSISTOR	RN2201
	Q110	TRANSISTOR	2SC2458
	Q201,202	TRANSISTOR	2SC2458
	Q501,502	TRANSISTOR	2SA992
	Q503,504	TRANSISTOR	2SC1845
	Q505,506	TRANSISTOR	2SA1145
	Q507,508	TRANSISTOR	2SC2705
	Q509,510	TRANSISTOR	2SC3298
	Q511,512	TRANSISTOR	2SA1306
	Q515,516	TRANSISTOR	2SA992
	Q517,518	TRANSISTOR	2SC2603
	Q523,524	TRANSISTOR	2SC1845
	Q601,602	TRANSISTOR	2SC1845
	Q604	TRANSISTOR	2SC1845
	Q605	TRANSISTOR	2SC2878
	D101,102	VARI−CAP DIODE	ITT310
	D103,104	VARI−CAP DIODE	SVC321C2
	D105−109	DIODE	1SS252
	D501−510	DIODE	1SS252
⚠	D601,602	DIODE	S5566
⚠	D603	DIODE	4D4B44
	D604,607	ZENER DIODE	HZS6B2L
	D605,606	DIODE	1SS252
	D608	ZENER DIODE	RD24EB
	D609,610	ZENER DIODE	RD12EB
	D613	DIODE	1SS252
	D616	ZENER DIODE	RD5.1EB
	D617	DIODE	1SS252
	D619	DIODE	1SS252
FILTERS			
	F101	CERAMIC FILTER	ATF−155
	F102,103	CERAMIC FILTER	ATF−126
	F104	CERAMIC FILTER	ATF−208
COILS & TRANSFORMER			
	L101	AXIAL INDUCTOR	LAU2R2M
	L102	COIL	ATB−114
	L103	COIL	ATE−079
	L104	INDUCTOR	LTA472J
	L105	COIL	ATC1004
	L106	COIL	ATC1002
	L107	COIL	ATC1011
	L108−110	AXIAL INDUCTOR	LAU2R2M
	L501,502	COIL	ATH1004
	T101	IF TRANSFORMER	ATE−063
	T102	COIL	ATB−095
RELAY			
	RY501	RELAY	ASR−112
CAPACITORS			
	C101	CERAMIC CAPACITOR	CCDCH040C50
	C102	CERAMIC CAPACITOR	CKDYF103Z50
	C103	CERAMIC CAOACITOR	CCDRH150J50
	C104	CERAMIC CAPACITOR	CKDYF103Z50
	C105	CERAMIC CAPACITOR	CCDSL020C50
	C107	CERAMIC CAPACITOR	CCDSL101J50
	C108	CERAMIC CAPACITOR	CKDYF103Z50
	C111	CERAMIC CAPACITOR	CCDCH150J50
	C112	CERAMIC CAPACITOR	CCDCH330J50
	C113	CERAMIC CAPACITOR	CCDCH080D50

Mark	No.	Description	Parts No.
	C114	CERAMIC CAPACITOR	CCDTH180J50
	C115	CERAMIC CAPACITOR	CKDYB102K50
	C116	CERAMIC CAPACITOR	CCDSL010C50
	C117	CERAMIC CAPACITOR	CCDCH150J50
	C118	CERAMIC CAPACITOR	CKDYF103Z50
	C119	CERAMIC CAPACITOR	CCDCH150J50
	C120	PL.STYRENE CAPACITOR	CQSA431J50
	C121	CERAMIC CAPACITOR	CKCYF223Z50
	C122,123	CERAMIC CAPACITOR	CKDYF103Z50
	C124,125	CERAMIC CAPACITOR	CKDYF473Z50
	C126	CERAMIC CAPACITOR	CKDYX473M25
	C128	CERAMIC CAPACITOR	CCCSL221J50
	C129	CERAMIC CAPACITOR	CKDYF103Z50
	C130	ELECTR.CAPACITOR	CEAS010M50
	C131	ELECTR.CAPACITOR	CEAS0R1M50
	C132	MYLOR FILM CAPACITOR	CQMA683J50
	C133	CERAMIC CAPACITOR	CKCYB472K50
	C134	ELECTR.CAPACITOR	CEAS2R2M50
	C135	ELECTR.CAPACITOR	CEAS100M50
	C136	ELECTR.CAPACITOR	CEAS3R3M50
	C137	ELECTR.CAPACITOR	CEAS4R7M50
	C138	CERAMIC CAPACITOR	CKDYF473Z50
	C139	ELECTR.CAPACITOR	CEAS100M50
	C140	CERAMIC CAPACITOR	CKCYF223Z50
	C141	CERAMIC CAPACITOR	CKDYF103Z50
	C142,143	CERAMIC CAPACITOR	CCDCH150J50
	C144	ELECTR.CAPACITOR	CEAS330M16
	C145	CERAMIC CAPACITOR	CKDYF103Z50
	C146	ELECTR.CAPACITOR	CEASR47M50
	C147,148	CERAMIC CAPACITOR	CKDYF103Z50
	C149	ELECTR.CAPACITOR	CEAS100M50
	C150	ELECTR.CAPACITOR	CEANP100M50
	C151	ELECTR.CAPACITOR	CEAS470M25
	C152,153	MYLOR FILM CAPACITOR	CQMA102K50
	C154,155	CERAMIC CAPACITOR	CKDYB272K50
	C156	ELECTR.CAPACITOR	CEASR22M50
	C157	CERAMIC CAPACITOR	CKDYF473Z50
	C158	ELECTR.CAPACITOR	CEAS3R3M50
	C159	PL.STYRENE CAPACITOR	CQSA471J50
	C160	ELECTROLYTIC CAPACITOR	CEAS1R5M50
	C161,162	ELECTR.CAPACITOR	CEAS2R2M50
	C163	CERAMIC CAPACITOR	CCDSL470J50
	C164	CERAMIC CAPACITOR	CKDYF473Z50
	C165	ELECTR.CAPACITOR	CEAS100M50
	C166	CERAMIC CAPACITOR	CKDYF103Z50
	C168	CERAMIC CAPACITOR	CKDYF103Z50
	C169	ELECTR.CAPACITOR	CEAS100M50
	C170	CERAMIC CAPACITOR	CKDYF103Z50
	C172	CERAMIC CAPACITOR	CKDYX473M25
	C173	CERAMIC CAPACITOR	CKDYF473Z50

Mark	No.	Description	Parts No.
	C180	CERAMIC CAPACITOR	CKDYF223Z50
	C201,202	ELECTR.CAPACITOR	CEAS2R2M50
	C203	CERAMIC CAPACITOR	CKDYF473Z50
	C204,205	CERAMIC CAPACITOR	CKDYF103Z50
	C301,302	ELECTR.CAPACITOR	CEAS2R2M50
	C303,304	CERAMIC CAPACITOR	CCCSL221J50
	C305,306	ELECTR.CAPACITOR	CEAS470M10
	C307,308	CERAMIC CAPACITOR	CKDYF103Z50
	C309,310	MYLOR FILM CAPACITOR	CQMA242J50
	C311,312	MYLOR FILM CAPACITOR	CQMA822J50
	C313,314	ELECTR.CAPACITOR	CEAS2R2M50
	C315	CERAMIC CAPACITOR	CKDYB331K50
	C316	CERAMIC CAPACITOR	CKDYF473Z50
	C340	ELECTROLYTIC CAPACITOR	CEAS010M50
	C501,502	ELECTR.CAPACITOR	CEAS2R2M50
	C503,504	CERAMIC CAPACITOR	CKDYB102K500
	C505,506	CERAMIC CAPACITOR	CCDSL470J50
	C507,508	CERAMIC CAPACITOR	CCCSL470J50
	C509,510	CERAMIC CAPACITOR	CCCSL221J50
	C511,512	ELECTR.CAPACITOR	CEAS101M16
	C513–516	CERAMIC CAPACITOR	CCDCH150J50
	C517,518	CERAMIC CAPACITOR	CCCSL050C500
	C519–522	MICA CAPACITOR	CMA101J500
	C523,524	ELECTR.CAPACITOR	CEAS2R2M50
	C525–528	AUDIO FILM CAPACITOR	CFTXA104J50
	C601	ELECTROLYTIC CAPACITOR	CEHAQ470M25
	C602	ELECTR.CAPACITOR	CEAS101M25
	C603	ELECTROLYTIC CAPACITOR	CEAS471M6
	C604	ELECTR.CAPACITOR	CEAS101M16
	C605	ELECTROLYTIC CAPACITOR	CEAS2R2M100
	C606,607	ELECTROLYTIC CAPACITOR	ACH1118
	C608	ELECTROLYTIV CAPACITOR	CEAS102M35
	C609	ELECTR.CAPACITOR	CEAS100M50
	C610	ELECTR.CAPACITOR	CEAS470M10
⚠	C611	CKA(0.01/AC400V)	ACG1003
	C612	ELECTR.CAPACITOR	CEAS100M50
	C616	ELECTR.CAPACITOR	CEANP3R3M50
	C618	ELECTROLYTIC CAPACITOR	CEANPR47M50
	C619	ELECTROLYTIC CAPACITOR	ACH1011
	C805,806	CERAMIC CAPACITOR	CKDYF103Z50

Mark	No.	Description	Parts No.
RESISTORS			
	VR101	VR	VRTB6VS472
	R307,308	CARBON FILM RESISTOR	RD1/4PM681J
	R309,310	CARBON FILM RESISTOR	RD1/4PM303J
	R311,312	CARBON FILM RESISTOR	RD1/4PM394J
	R501,502	CARBON FILM RESISTOR	RDR1/6PU561J
	R513,514	CARBON FILM RESISTOR	RD1/4PM681J
	R515,516	CARBON FILM RESISTOR	RD1/4PM104J
⚠	R519,520	CARBON FILM RESISTOR	RD1/4PMF680J
⚠	R521–526	FUSLIBLE RESISTOR	RFA1/4PS101J
⚠	R527,528	CARBON FILM RESISTOR	RD1/4PMF101J
	R533,534	RESISTOR (0.33,5W)	ACN–139
⚠	R537,538	CARBON FILM RESISTOR	RD1/4PMF101J
	R543,544	METAL FILM RESISTOR	RN1/4PQ1501F
⚠	R553,554	CARBON FILM RESISTOR	RD1/4PMF100J
⚠	R555,556	CARBON FILM RESISTOR	RD1/4PMF100J
	R559,560	CARBON FILM RESISTOR	RDR1/6PU912J
	R561,562	CARBON FILM RESISTOR	RDR1/6PU152J
⚠	R601	METAL OXIDE RESISTOR	RS2LMF152J
⚠	R602	METAL OXIDE RESISTOR	RS2LMF242J
	R603	METAL OXIDE RESISTOR	RS1LMF181J
⚠	R607	METAL OXIDE RESISTOR	RS2LMF242J
⚠	R608	METAL OXIDE RESISTOR	RS1LMF122J
	R614	CARBON FILM RESISTOR	RD1/4PM302J
	R615	CARBON FILM RESISTOR	RFA1/4PS101J
		Other resistors	RD1/8PM□□□J
OTHERS			
		SCREW(STEEL)	ABA1009
		ANTENNA TERMINAL 4–P	AKA1010
		PHONO JACK 4–P	AKB1007
		PHONO JACK 6–P	AKB1024
	TC101,102	CERAMIC TRIMMER	ACM–015
	X101	CRYSTAL RESONATOR	ASS1005

Mark	No.	Description	Parts No.
SP SWITCH ASS'Y			
SWITCH			
	S851	PUSH SWITCH	SUL5LXBXS
RESISTORS			
⚠	R851,852	METAL OXIDE RESISTOR	RS1PMF331J
	R859,860	METAL OXIDE RESISTOR	RS1PMF681J
OTHER			
		JACK	AKN1002
SP TERMINAL ASS'Y			
		SPEAKER TERMINAL 8–P	AKE–111
POWER SW ASS'Y			
SWITCH			
⚠	S1		ASG1027
CAPACITOR			
	C1	CKA(0.01/AC400V)	ACG1003
CONTROL ASS'Y (AWZ2872)			
SEMICONDUCTORS			
	IC401,402	OP–AMP IC	M5218P
	IC701	AXIAL INDUCTOR	PDG013–B
	Q701	TRANSISTOR	RN1203
	Q704–706	TRANSISTOR	RN1203
	D701	DIODE	1SS252
	D704–706	DIODE	1SS252
SWITCHES			
	S701–716	SWITCH	ASG1029
	S718–727	SWITCH	ASG1029
	S401	SWITCH	SEAV1S
CAPACITORS			
	C401,402	ELECTROLYTIC CAPACITOR	CEJA4R7M35
	C403,404	ELECTR.CAPACITOR	CEJA010M50
	C405,406	CERAMIC CAPACITOR	CCMSL470J50
	C409,410	ELECTR.CAPACITOR	CEJA2R2M50
	C411,412	MYLOR FILM CAPACITOR	CQMA153J50
	C413,414	MYLOR FILM CAPACITOR	CQMA823J50
	C415,416	MYLOR FILM CAPACITOR	CQMA332J50
	C417,418	MYLOR FILM CAPACITOR	CQMA183J50
	C419,420	ELECTR.CAPACITOR	CEJA2R2M50
	C421,422	CERAMIC CAPACITOR	CKMYB102K50

Mark	No.	Description	Parts No.
	C423	CERAMIC CAPACITOR	CCDSL390K500
	C425,426	ELECTROLYTIC CAPACITOR	CEJA100M25
	C427,428	ELECTR.CAPACITOR	CEJA470M10
	C429,430	ELECTR.CAPACITOR	CEJA010M50
	C701,702	CERAMIC CAPACITOR	CCDCH330J50
	C424	CERAMIC CAPACITOR	CCCSL390K500
	C703	ELECTR.CAPACITOR	CEJA010M50
	C704	ELECTROLYTIC CAPACITOR	CEJA4R7M50
	C706	ELECTR.CAPACITOR	CEAS101M10
	C707	CERAMIC CAPACITOR	CKDYF473Z50
	C708	CERAMIC CAPACITOR	CKDYF103Z50
	C709,710	CERAMIC CAPACITOR	CKDYB331K50
	C711	CERAMIC CAPACITOR	CKDYX473M25
	C720		CEJA2R2M50
RESISTORS			
	VR401	VARIABLE (100K−A5X2)	ACT1040
	VR402	VARIABLE (100K)	ACS1054
	VR403,404	VARIABLE (100K)	ACS1053
	R435,436	CARBON FILM RESISTOR	RDR1/6PU332J
		Other resistors	RD1/8PM□□□J
OTHERS			
	X701	CERAMIC RESONATOR	ASS1004
	V701	FL TUBE	AAV1079
	L701		LAU560K

6. ADJUSTMENTS

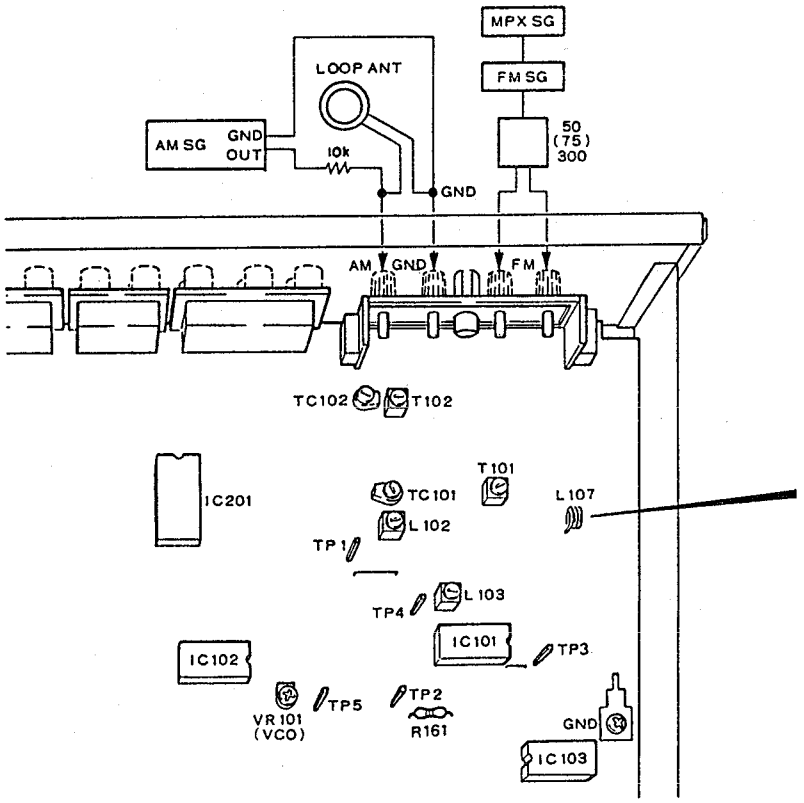

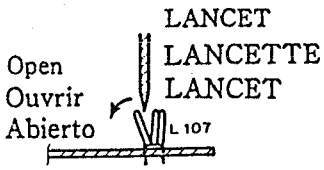

Ajusting L107
Règlage de L107
Ajuste de L107

6.1 ADJUSTMENTS FOR HE AND HB TYPES

FM TUNER SECTION

- Connect the FM signal generator (FM SG) to the FM ANTENNA 300Ω terminal through a 300Ω dummy antenna.
- Set the function to FM.
- Connect the FM multiplex stereo signal generator to the FM SG external modulator terminal. Set the modulation to Main 1 kHz/L+R/±68.25kHz deviation. Pilot·19kHz/±6.75kHz deviation.

Step	FM SG (1kHz, ±75kHz deviation)		Frequency display	Adjustment point	Adjustment procedure
	Frequency	Level			
1	No signal		87.5MHz	———	Check DC voltage between terminal TP1(VT) and ground (2.5V−4V).
2	98.0MHz	30 to 40 dB	98.0MHz	T101 L107	Adjust DC voltage between IC101 13 pin and ground at maximum.
3	98.0MHz	60dB	98.0MHz	L103	Adjust DC voltage between terminal TP 3 and TP 4 to 0±50mV.
4	98.0MHz	60dB	98.0MHz	VR101	Adjust signal between TP 5(VCO) and ground to 76kHz (within ±200Hz).
	no modulation				

AM TUNER SECTION

MW Tuner Section

- Connect the furnished AM loop antenna between terminals AM ANTENNA and GND.
- Connect the AM signal generator (AM SG) to the AM ANTENNA terminal through a 10kΩ resistor.
- Set the function to AM (MW).

(*1) One is the channel step frequency of 10kHz and the other is 9kHz. Accordingly, in case of model 10kHz step, the adjustment should be performed by using the frequency of Item "10kHz step" and in case of model 9kHz step, the adjustment should be performed by using the frequency of Item "9kHz step".

(*2) Tune the AM SG to the SX-337.

Step	AM SG (400Hz,30% modulation)			Frequency display (*1)		Adjustment point	Adjustment procedure
	Frequency (*1)		Level				
	10kHz step	9kHz step		10kHz step	9kHz step		
1	No signal			530kHz	531kHz	L102	Adjust DC voltage between terminal TP 1(VT) and ground. (1.3±0.1V)
2	No signal			1700kHz	1602kHz	TC101	Adjust DC voltage between terminal TP 1(VT) and ground. (10±0.3V)
3	Repeat steps 1 and 2 until both specifications become correct.						
4	600kHz(*2)	603kHz(*2)	76dB	600kHz	603kHz	T102	Adjust DC voltage between TP2 and ground at maximum.
5	1400kHz(*2)	1395kHz(*2)	76dB	1400kHz	1395kHz	TC102	
6	Repeat steps 4 and 5 until maximum sensitivity is attained.						
7	1000kHz	999kHz(*2)	45 to 65dB	1000kHz	999kHz	R161 4.7kΩ	However, remove the R161(4.7kΩ) from the COMPLEX assembly if the tuning indicator fails of light up at more than 65dB.

6.1 RÉGLAGES POUR LES TYPES HE ET HB

SECTION TUNER FM

- Connecter le générateur de signaux FM (FM SG) à la borne de 300 ohms de l'antenne FM (FM ANTENNA) par l'intermédiaire d'une antenne factice de 300 ohms.
- Régler la fonction sur FM.
- Connecter le générateur de signaux stéréo multiplex FM à la borne du modulateur externe FM SG. Régler la modulation à Principal 1 kHz/G+D/±68,25 kHz d'écart; Pilote 19 kHz/±6,75 kHz d'écart.

Etape	FM SG (1kHz, ±75kHz d'écart)		Affichage de fréquence	Point de réglage	Procédure de réglage
	Fréquence	Niveau			
1	Pas de signal		87,5 MHz	———	Vérifier la tension CC entre la borne TP1 (VT) et la terre (2,5 V - 4 V).
2	98,0 MHz	30 à 40 dB	98,0 MHz	T101 L107	Régler la tension CC entre la broche (13) IC101 et la terre au maximum.
3	98,0 MHz	60 dB	98,0 MHz	L103	Régler la tension CC entre les bornes TP3 et TP4 à 0 ±50mV.
4	98,0 MHz	60 dB	98,0 MHz	VR101	Régler le signal entre la borne TP5 (VCO) et la terre à 76 kHz (moins de ±200 Hz).
	sans modulation				

SECTION TUNER AM

Section tuner PO

- Connecter l'antenne cadre AM fournie entre les bornes d'antenne AM (AM ANTENNA) et de terre (GND).
- Connecter le générateur de signaux AM (AM SG) à la borne d'antenne AM (ANTENNA AM) par l'intermédiaire d'une résistance de 10 kohms.
- Régler la fonction sur AM (MW).

(*1) Le premier est la fréquence de pas de canaux de 10 kHz et l'autre de 9 kHz. En conséquence, dans le cas du modèle avec pas de 10 kHz, le réglage doit être effectué en utilisant la fréquence de l'article "Pas de 10 kHz" et dans le cas du modèle avec pas de 9 kHz, le réglage doit être effectué en utilisant la fréquence de l'article "Pas de 9 kHz".

(*2) Accorder le AM GS au SX-337.

Etape	AM SG (400 Hz, modulation de 30%)			Affichage de fréquence (*1)		Point de réglage	Procédure de réglage
	Fréquence (*1)		Niveau				
	Pas de 10kHz	Pas de 9kHz		Pas de 10kHz	Pas de 9kHz		
1	Pas de signal			530 kHz	531 kHz	L102	Régler la tension CC entre la borne TP1 (VT) et la terre (1,3 V ±0,1 V)
2	Pas de signal			1700 kHz	1602 kHz	TC101	Régler la tension CC entre la borne TP1 (VT) et la terre (10 V ±0,3 V)
3	Répéter les étapes 1 et 2 jusqu' à ce que les spécifications soient toutes les deux correctes.						
4	600kHz(*2)	603kHz(*2)	76 dB	600 kHz	603 kHz	T102	Régler la tension CC entre TP2 et la terre au maximum.
5	1400kHz(*2)	1395kHz(*2)	76 dB	1400 kHz	1395 kHz	TC102	
6	Répéter les étapes 4 et 5 jusqu' à ce que la sensibilité maximum soit obtenue.						
7	1000 kHz	999kHz(*2)	45 à 65 dB	1000 kHz	999 kHz	(R161 4,7 kohms)	Cependant, retirer le R161 (4,7 kohms) de l'ensemble COMPLEX si le témoin d'accord ne s'allume pas à plus de 65 dB.

6.1 AJUSTE PARA LOS TIPOS HE Y HB

SECCIÓN DEL SINTONIZADOR DE FM

- Conecte el generador de señal de FM (FG SG) al terminal FM ANTENNA 300Ω a través de una antena ficticia de 300Ω.
- Ajuste la función a FM.
- Conecte el generador de señales estéreo múltiplex de FM al terminal del modulador externo del FM SG. Ajuste la modulación de la señal principal a 1 kHz/L+R/±68,25 kHz de desviación, y la señal piloto a 19 kHz/±6,75 kHz de desviación.

Paso	FM SG (1 kHz, +75 kHz de desviación)		Frecuencímetro del	Punto de ajuste	Procedimiento de ajuste
	Frecuencia	Nivel			
1	Sin señal		87,5 MHz	———	Compruebe la tensión de CC entre el terminal TP1 (VT) y masa (2,5V – 2V).
2	98,0 MHz	30 a 40 dB	98,0 MHz	T101 L107	Ajuste al máximo la tensión de CC entre la patilla (13) del IC101 y masa.
3	98,0 MHz	60 dB	98,0 MHz	L103	Ajuste la tensión de CC entre los terminales TP3 y TP4 a 0±50 mV.
4	98,0 MHz	60 dB	98,0 MHz	VR101	Ajuste la señal entre el terminal TP5 (VCO) y masa a 76 kHz (dentro de ±200 Hz).
	Sin modulación				

SECCIÓN DEL SINTONIZADOR DE AM

Sección del sintonizador de MW

- Conecte la antena de cuadro de AM suministrada entre los terminales AM ANTENNA y GND.
- Conecte el generador de señales de AM (AM SG) al terminal AM ANTENNA a través de un resistor de 10 kilohmios.
- Ajuste la función a AM (MW).

(*1) Uno es el de frecuencia de separación entre canales de 10 kHz, y el otro de 9 kHz. Por consiguiente, en el caso del modelo de separación de 10 kHz, el ajuste deberá realizarse empleando la frecuencia del ítem "separación de 10 kHz", y en el caso del modelo de 9 kHz, el ajuste deberá realizarse empleando la frecuencia del ítem "separación de 9 kHz".

(*2) Sintonice el AM SG con el SX-337.

Paso	AM SG (400 Hz, modulación al 30%)			Frecuencímetro del(*1)		Punto de ajuste	Procedimiento de ajuste
	Frecuencia (*1)		Nivel				
	Separación de 10 kHz	Separación de 9 kHz		Separación de 10 kHz	Separación de 9 kHz		
1	Sin señal			530 kHz	531 kHz	L102	Ajuste la tensión de CC entre el terminal TP1 (VT) y masa (1,3 ±0,1V).
2	Sin señal			1700 kHz	1602 kHz	TC101	Ajuste la tensión de CC entre el terminal TP1 (VT) y masa (10 ±0,3V).
3	Repita los pasos 1 y 2 hasta que ambas especificaciones sean correctas.						
4	600kHz(*2)	603kHz(*2)	76 dB	600 kHz	603 kHz	T102	Ajuste al máximo la tensión de CC entre el terminal TP2 y masa.
5	1400kHz(*2)	1395kHz(*2)	76 dB	1400 kHz	1395 kHz	TC102	
6	Repita los pasos 4 y 5 hasta obtener la sensibilidad máxima.						
7	1000 kHz	999 kHz (*2)	45 a 65 dB	1000 kHz	999 kHz	R161 4,7 kilohmios	Sin embargo, si el indicador de sintonía no se enciende a más de 65 dB, desconecte R161 (4,7 kilohmios) del conjunto COMPLEX.

6.2 ADJUSTMENTS FOR HEWZ TYPE

- This adjustment procedure is for only the adjustment (FM tuner adjustment Step I) which is different from that for the SX-337/HEWZ type.

FM Tuner Adjustment

Step		FM SG (1kHz ±75kHz deviation) Frequency	FM SG (1kHz ±75kHz deviation) Level	Frequency display	Adjustment point	Adjustment procedure
I	1	90.0MHz	30 to 40dB	90.0MHz	L902,T901,L903 (AWB1004)	Adjustment until DC voltage between IC101 13pin (FM S−METER) and ground is at maximum.
	2	106.0MHz	30 to 40dB	106.0MHz	TC901,T901,L903 (AWB1004)	
	3	90.0MHz	30 to 40dB	90.0MHz	L902 (AWB1004)	
	4	Repeat step 2 and 3 until the DC voltage between IC101 13pin (FM S−METER) and GND is at maximum. Step 3 should always be the last step performed.				
	5	98.0MHz	30 to 40dB	98.0MHz	T902(AWB1004)	Adjustment until DC voltage between IC101 13pin (FM S−METER) and ground is at maximum.
II	6	98.0MHz	60dB	98.0MHz	L103	Adjust DC voltage between terminal TP 3 and TP 4 to 0±50mV
	7	98.0MHz	60dB	98.0MHz	VR101	Adjust signal between TP 5(VCO) and ground to 76kHz (within ±200Hz).

As the adjusting method for the AM tuner is the same as that for the HB and HE types, refer to 24 page.

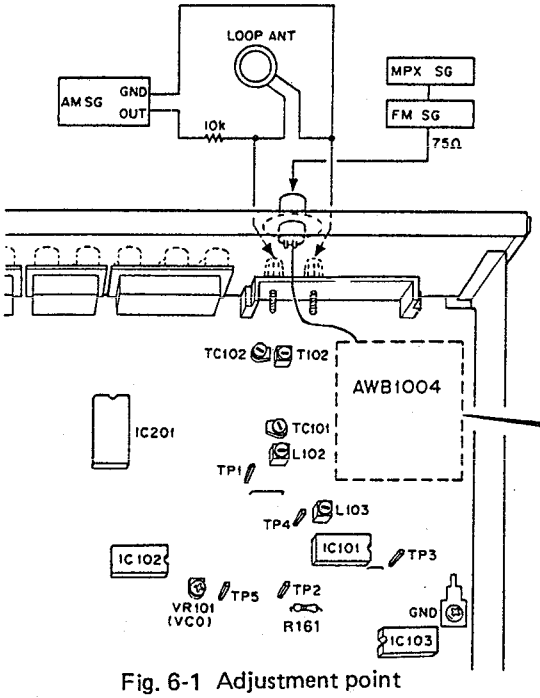

Fig. 6-1 Adjustment point

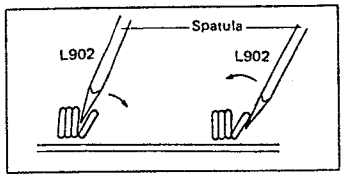

To make the output maximum by opening and closing of the first right side turn of the coil.

Fig. 6-3 Adjustment tuning

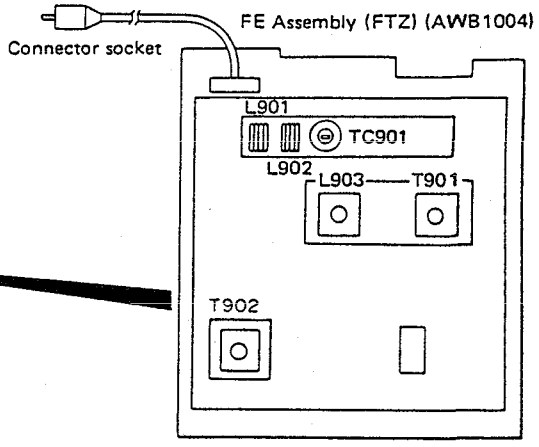

Fig. 6-2 Adjustment point of FE Assembly



Use a spatula whose an edge is thin. The spatula is not metal (ex. Glass-Cloth Epoxy Resin).

SPATULA

6.2 RÉGLAGES POUR LE TYPE HEWZ

- Ce réglage n'est à effectuer que lorsque le réglage (réglage de tuner FM, Etape 1) est différent de celui pour le type SX-337/HEWZ.

Réglage Tuner FM

Etape		FM SG (1 kHz, ±75 kHz d'édart) Fréquence	FM SG (1 kHz, ±75 kHz d'édart) Niveau	Affichage de fréquence	Point de réglage	Procédure de réglage
I	1	90,0 MHz	30 à 40 dB	90,0 MHz	L902, T901, L903 (AWB1004)	Réglage jusqu'à ce que la tension CC entre la broche 13 de IC101 (S-METRE FM) et la terre soit au maximum.
	2	106,0 MHz	30 à 40 dB	106,0 MHz	TC901, T901, L903 (AWB1004)	
	3	90,0 MHz	30 à 40 dB	90,0 MHz	L902 (AWB1004)	
	4	Répéter les étapes 2 et 3 jusqu'à ce que la tension CC entre la broche 13 de IC101 (S-METRE FM) et la terre soit au maximum. L'étape 3 doit toujours être effectuée en dernier.				
	5	98,0 MHz	30 à 40 dB	98,0 MHz	T902 (AWB1004)	Réglage jusqu'à ce que la tension CC entre la broche 13 de IC101 (S-METRE FM) et la terre soit au maximum.
II	6	98,0 MHz	60 dB	98,0 MHz	L103	Régler la tension CC entre les bornes TP3 et TP4 à 0 ±50mV
	7	98,0 MHz	60 dB	98,0 MHz	VR101	Régler le signal entre la borne TP5 (VCO) et la terre à 76 kHz (moins de ±200 Hz).

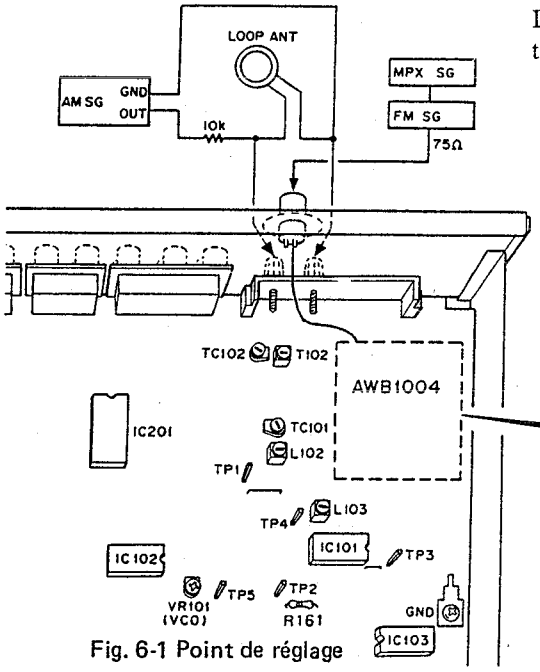

Fig. 6-1 Point de réglage

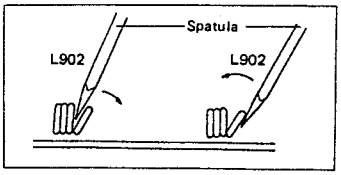

Pour obtenir une sortie maximale en ouvrant et fermant la spire à l'extrémité droite de la bobine.

Fig. 6-3 Accord de réglage

La méthode d'adjustment de la redio AM est la même que celle des types HB et HE, se référer à la page 25 .

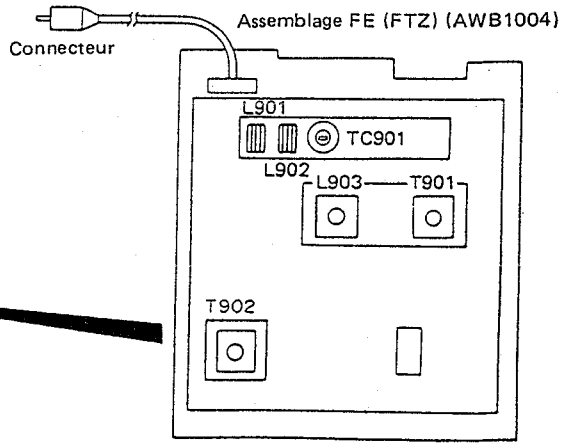

Fig. 6-2 Point de réglage de l'assemblage FE

Utiliser une spatule à bord fin. Elle ne doit pas être en métal (ex. résine époxy tissu de verre)

SPATULE

6.2 AJUSTE PARA EL TIPO HEWZ

- Este procedimiento de ajuste es solamente el ajuste (paso I de ajuste del sintonizador de FM) que es diferente al del tipo SX-337/HEWZ.

Ajuste del sintonizador de FM

Paso		Señal de FM (1 kHz, desviación ±75 kHz)		Presentación de frecuencia	Punto de ajuste	Procedimiento de ajuste
		Frecuencia	Nivel			
I	1	90 MHz	30 a 40 dB	90 MHz	L902, T901, L903 (AWB1004)	Ajuste hasta que la tensión de CC entre la patilla 13 del IC101 (FM S-METER) y puesta a tierra se encuentre al máximo.
	2	106 MHz	30 a 40 dB	106 MHz	TC901, T901, L903 (AWB1004)	
	3	90 MHz	30 a 40 dB	90 MHz	L902 (AWB1004)	
	4	Repita los pasos 2 y 3 hasta que la tensión de CC entre la patilla 13 del IC101 (FM S-METER) y puesta a tierra (GND) se encuentre al máximo. El paso 3 siempre debe ser el último paso realizado.				
	5	98 MHz	30 a 40 dB	98 MHz	T902 (AWB1004)	Ajuste hasta que la tensión de CC entre la patilla 13 del IC101 (FM S-METER) y puesta a tierra se encuentre al máximo.
II	6	98,0 MHz	60 dB	98,0 MHz	L103	Ajuste la tensión de CC entre los terminales TP3 y TP4 a 0±50 mV.
	7	98,0 MHz	60 dB	98,0 MHz	VR101	Ajuste la señal entre el terminal TP5 (VCO) y masa a 76 kHz (dentro de ±200 Hz).

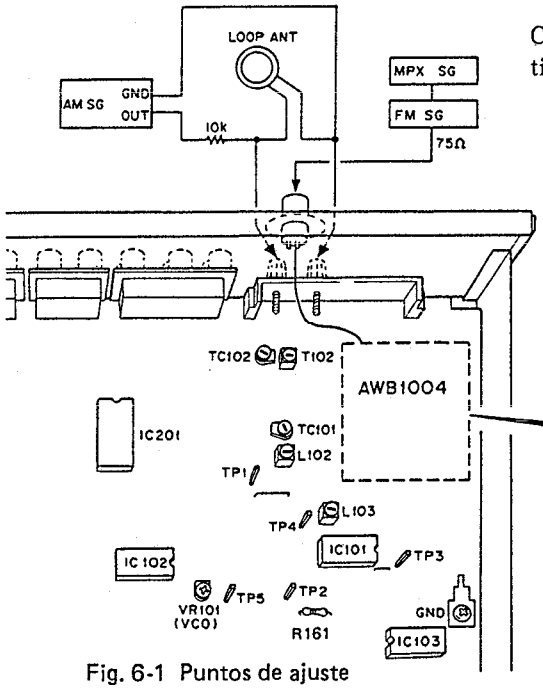

Fig. 6-1 Puntos de ajuste

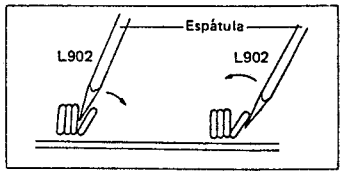

Ajuste al máximo la salida abriendo y cerrando la primera espira de la derecha de la bobina.

Fig. 6-3 Ajuste de la sontinía

Como el método de ajuste del sintonizador de AM es igual que para los tipos HB y HE, consulte la página 26 .

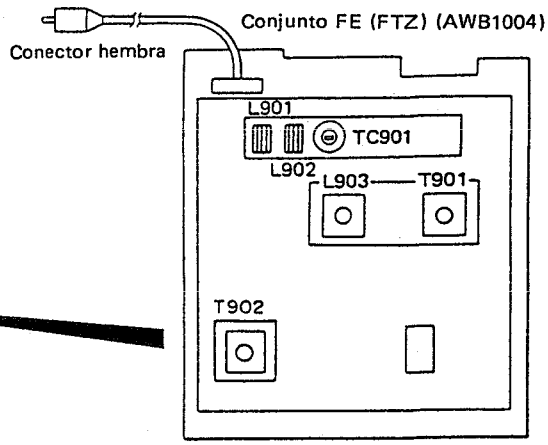

Fig. 6-2 Puntos de ajuste del conjunto FE

Emplee una espátula cuyo borde sea fino. La espátula no deberá ser de metal (p. ej. resina epoxídica con fibra de vidrio)

ESPÁTULA

7. FOR HEWZ TYPE

7.1 CONTRAST OF MISCELLANEOUS PARTS

NOTES:

- *Parts without part number cannot be supplied.*
- *The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.*
- *Parts marked by "◉" are not always kept in stock. Their delivery time may be longer than usual or they may be unavailable.*

The SX−337/HEWZ type is the same as the SX−337/HE type with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		SX−337/HE type	SX−337/HEWZ type	
	COMPLEX assembly	AWZ2386	AWZ2391	
	SP SWITCH assembly	Non supply	Non supply	
	SP TERMINAL assembly	Non supply	Non supply	
	TRANS assembly	Non supply	Non supply	
⚠	C2 Power capacitor (0.1μF/250V)	.....	ACE−507	
	C3−C6	.....	CKDYB681K50	
	C7	.....	CQMXA104J100	
	C9	.....	CKDYB102K50	
⚠	AC Power cord	ADG1021	ADG1010	
	Earth screw	.....	ABA1047	
	FM antenna	ADH1004	.....	
	FM antenna assembly	.....	ADH1002	
	Pal socket	.....	AKX1029	
	Nut (M12)	.....	NKX2FNI	
	Operating instructions	ARE1152	.....	
	Operating instructions (Germany)	.....	ARC1190	

COMPLEX assembly (AWZ2391)

The COMPLEX assembly (AWZ2391) is the same as the COMPLEX assembly (AWZ2386) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		AWZ2386	AWZ2391	
	Q101,Q105	2SK241	.....	
	Q102	2SC2786		
	Q104	2SC2668		
	Q111	.....	2SC2458	
	D101,D102	ITT310	.....	
	T101	ATE−063	.....	
	F101	ATF−155	.....	
	F102,F103	ATF−126	.....	
	F102	.....	ATF−107	
	F103	.....	ATF−119	
	F105	.....	ATF−146	
	L101	LAU2R2M	.....	
	L105	ATC1004	.....	
	L106	ATC1002	.....	
	L107	ATC1011	.....	
	L111	.....	LAU2R2M	
	L501,L502	ATH1004	ATH1009	
	C101	CCDCH040C50	.....	
	C102,C104,C108,C166	CKCYF103Z50	.....	
	C103	CCDRH150J50	.....	
	C105	CCDSL020C50	.....	
	C107	CCDSL101J50	.....	
	C111,C117	CCDCH150J50	.....	
	C112	CCDCH330J50	.....	
	C113	CCDCH080D50	.....	
	C114	CCDTH180J50	.....	
	C115	CKDYB102K50	.....	
	C116	CCDSL010C50	.....	
	C150	CEANP100M50	CEANP010M50	
	C154,C155	CKCYB272K50	CKCYB182K50	
	C181,C335,C336	.....	CKDYB681K50	
	C182	.....	CEAS100M50	

Mark	Symbol & Description	Part No.		Remarks
		AWZ2386	AWZ2391	
	C183,C339,C531,C820	.....	CKDYF103Z50	
	C317−C324,C326−C334	.....	CKDYB391K50	
	C337,C338	.....	CKDYB821K50	
	C529,C530	.....	CKDYB331K50	
	C611 (0.01μF/AC 400V)	ACG1003	.....	
	C617 (0.01μF/AC 150V)	.....	ACG1005	
	R101	RD1/8PM470J	.....	
	R102,R106,R112	RD1/8PM221J	.....	
	R103,R111	RD1/8PM103J	.....	
	R104	RD1/8PM824J	.....	
	R105	RD1/8PM101J	.....	
	R107	RD1/8PM151J	.....	
	R108	RD1/8PM512J	.....	
	R109	RD1/8PM682J	.....	
	R110	RD1/8PM123J	.....	
	R113	RD1/8PM561J	RD1/8PM331J	
	R153	RD1/8PM753J	RD1/8PM683J	
	R154,R155	RD1/8PM472J	RD1/8PM392J	
	R156,R157	RD1/8PM562J	RD1/8PM183J	
	R163,R166	.....	RD1/8PM472J	
	R164	.....	RD1/8PM222J	
	R165	.....	RD1/8PM105J	
	R303,R304	RD1/8PM331J	RD1/8PM222J	
	R553,R554	RD1/4PMF100J	RD1/4PMF101J	
	R565	.....	RD1/4PMF100J	
	FRONT END assembly	.....	AWB1004	

Remarks

SP SWITCH assembly

The SP SWITCH assembly (HEWZ type) is the same as the SP SWITCH assembly (HE type) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		HE type	HEWZ type	
	C807,C808	.....	CKDYB392K50	

SP TERMINAL assembly

The SP TERMINAL assembly (HEWZ type) is the same as the SP TERMINAL assembly (HE type) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		HE type	HEWZ type	
	L801,L802	.....	ATH−133	
	C809−C812	.....	CKDYF103Z50	
	R861,R862	.....	RD1/4PMF101J	
	R865,R866	.....	RD1/4PMF100J	

TRANS assembly

The TRANS assembly (HEWZ type) is the same as the TRANS assembly (HE type) with the exception of the following sections.

Mark	Symbol & Description	Part No.		Remarks
		HE type	HEWZ type	
	L1	.....	ATF−151	

6.2 SCHEMATIC DIAGRAM

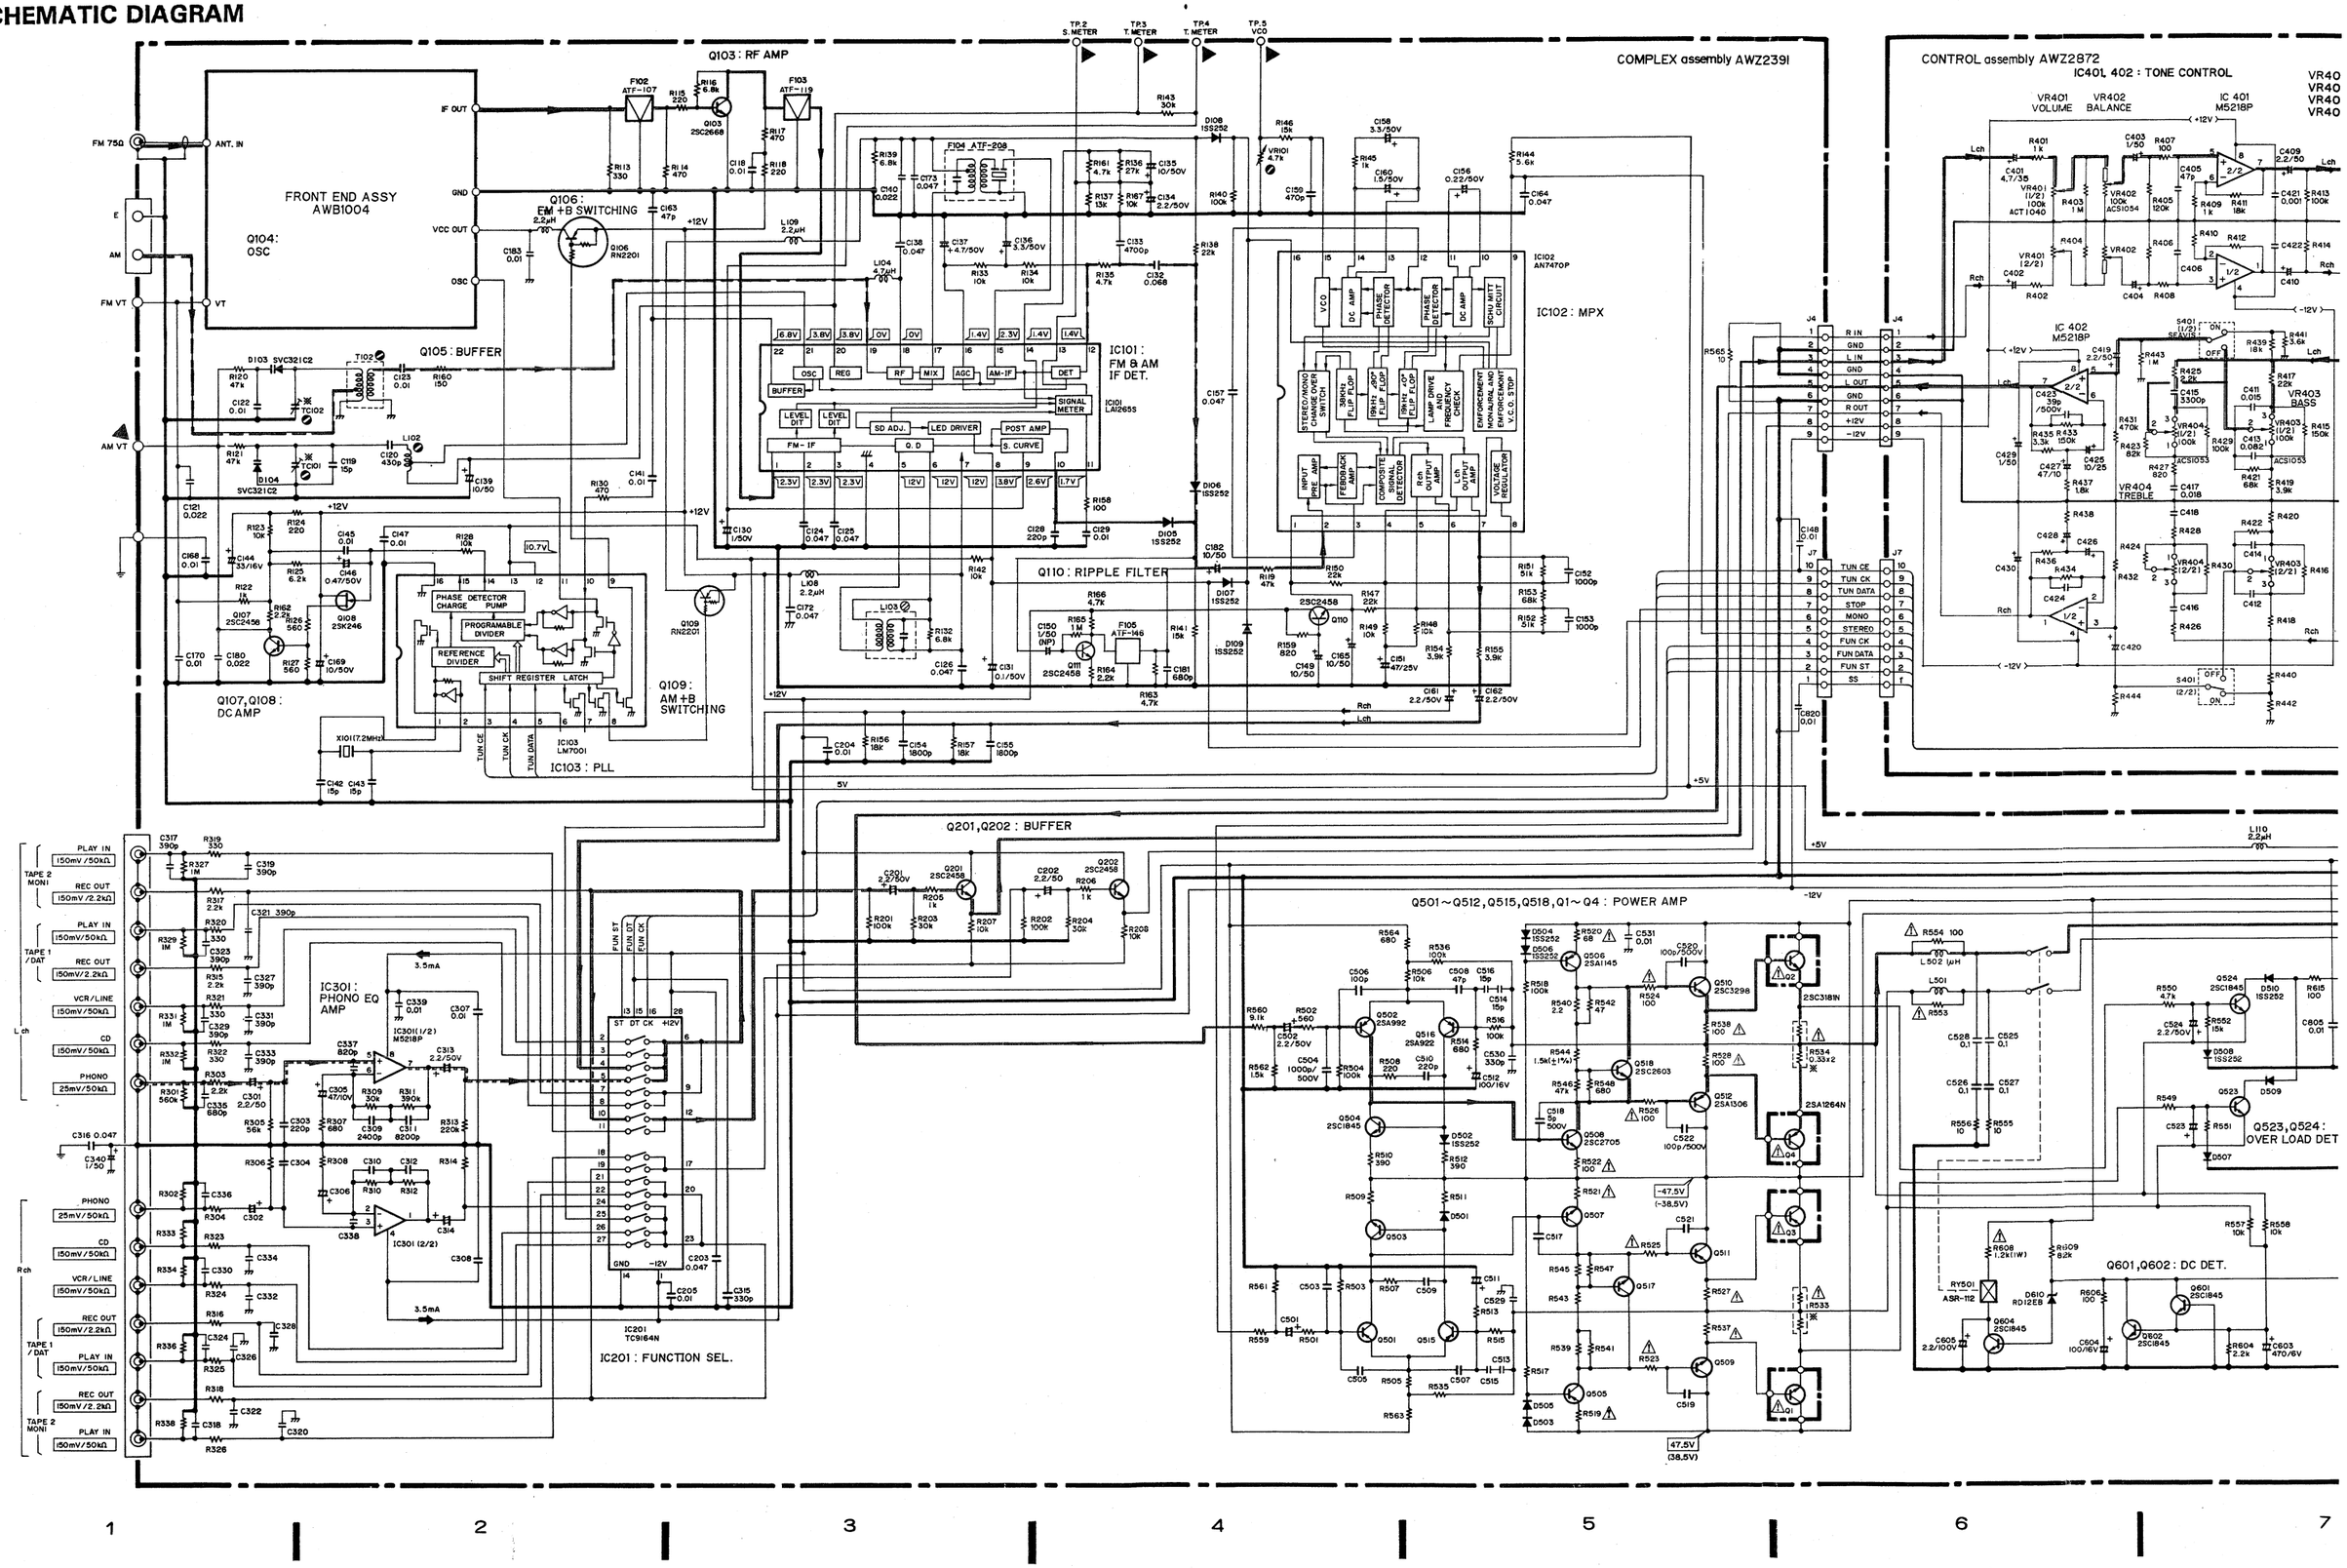

/ AWZ2872

IC401, 402 : TONE CONTROL

VR401 : VOLUME
VR402 : BALANCE
VR403 : BASS
VR404 : TREBLE

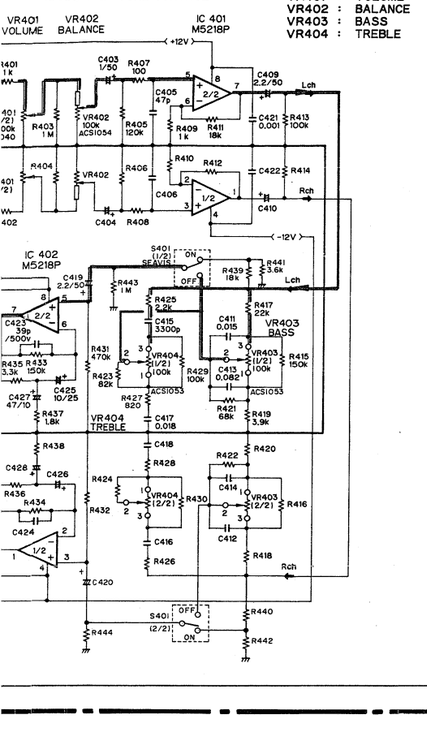

IC701 : MICROCOMPUTER

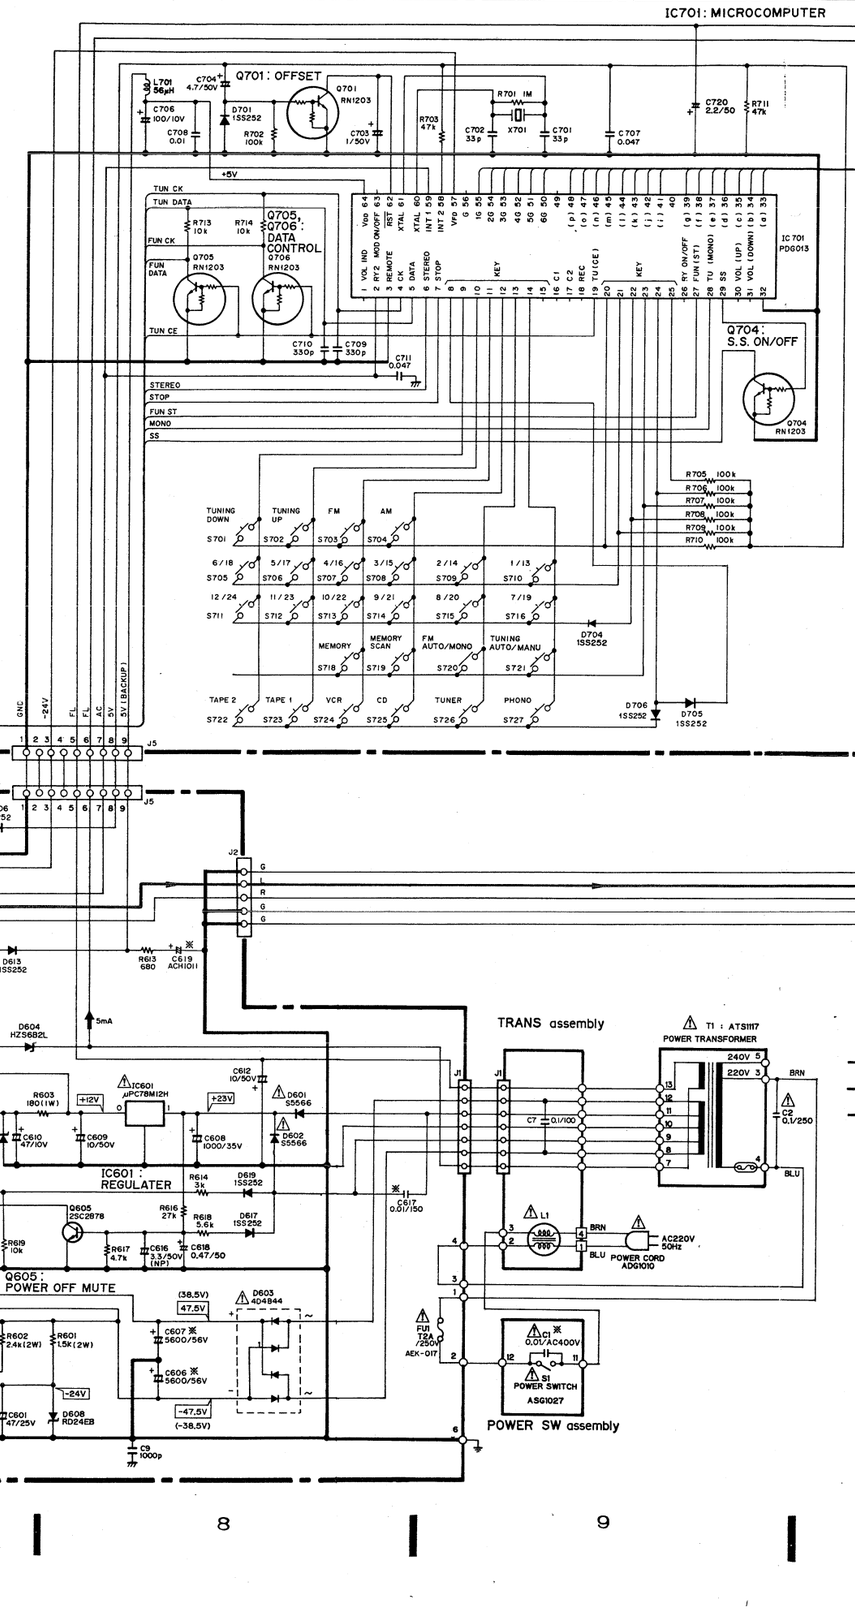

V701 AAV1079

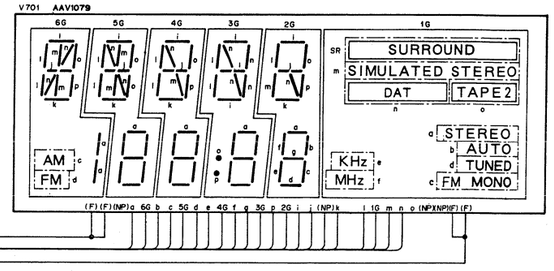

SP SWITCH assembly

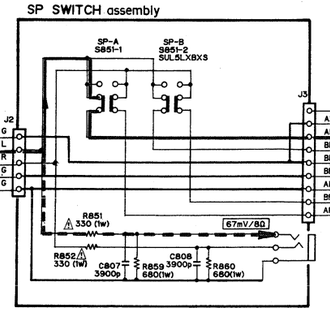

SP TERMINAL assembly

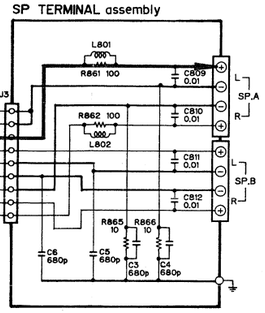

TRANS assembly

FM
AM
PHONO

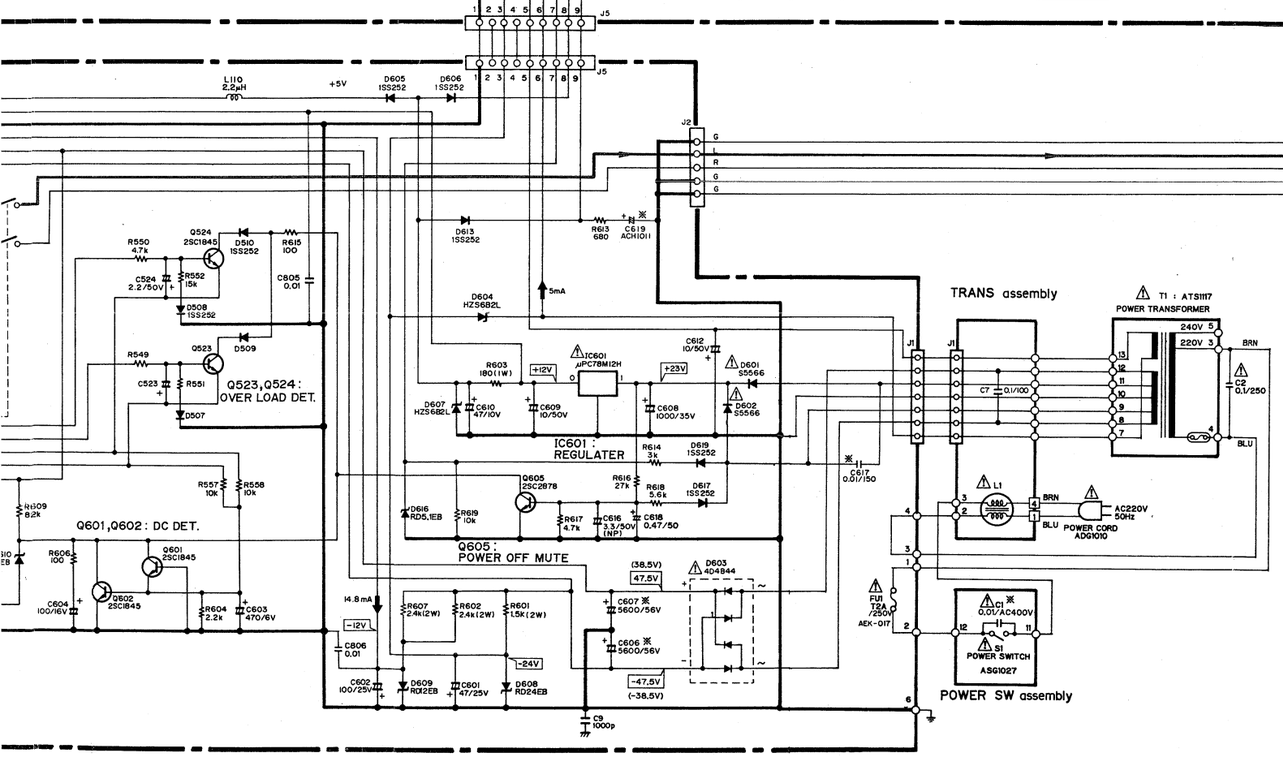

1. RESISTORS:
Indicated in Ω, 1/8W & 1/4W, ±5% tolerance unless otherwise noted k; kΩ, M; MΩ, (F); ±1%, (G); ±2%, (K); ±10%, (M); ±20% tolerance

2. CAPACITORS:
Indicated in capacity (μF)/voltage (V) unless otherwise noted p; pF. Indication without voltage is 50V except electrolytic capacitor.

3. VOLTAGE, CURRENT:
▭; DC voltage (V) at no input signal
Value in ( ) is DC voltage at rated power.
mA; DC current at no input signal

4. OTHERS:
➡; Signal route.
⊘; Adjusting point.

The ⚠ mark found on some component parts indicates the importance of the safety factor of the part. Therefore, when replacing, be sure to use parts of identical designation.
* marked capacitors and resistors have parts numbers.

This is the basic schematic diagram, but the actual circuit may vary due to improvements in design.

6.3 P.C.BOARD CONNECTION DIAGRAM

NOTE

1. This P.C.B connection diagram is viewed from the parts mounted side.
2. The parts which have been mounted on the board can be replaced with those shown with the corresponding wiring symbols listed in the following Table.

P.C.B. pattern diagram indication	Corresponding part symbol	Part Name
Q504 E	E or E	Transistor
Q215	or	Radiator type transistor
D203	D203	Diode
R237	R237	Resistor
C513		Capacitor (Polarity)
C518		Capacitor (Non-polarity)

Others

P.C.B. pattern diagram indication	Part Name
IC	IC
S	Switch
RY	Relay
L	Coil
F	Filter
VR	Variable resistor or Semi-fixed resistor

3. The capactor terminal marked with ⓞ(double circles) shows negatine termianl.
4. The diode terminal marked with ⓞ(double circles) shows cathode side.
5. The transistor terminal to which E is affixed shows the emitter.

SP TERMINAL assembly

SP SWITCH assembly

TRANS assembly

T1 POWER TRANSFORMER

POWER CORD AC220V / 50Hz

CONTROL assembly(AWZ2872)

AWZ 2872

VR403 VR404 VR401 VR402

IC701 IC402 Q704 Q705 Q706 IC401 Q701

IC601 Q601 Q602 Q604 Q202 Q201 IC201 IC301
Q605 Q516 Q506 Q502 Q504 Q508 Q515 Q505 Q5C Q503 IC102 Q110 Q111 IC101 Q103 Q106
Q524 Q523 Q510 Q512 Q509 Q507 Q511 Q518 Q517 Q107 Q108 IC103 Q109

VR101

COMPLEX assembly(AWZ2391)

ATTENTION POUR LES PRECAUTIONS CONTINUELLES CONTRE L'INCENDIE LES FUSIBLES A REPLACER DOIVENT ETRE LES MEME TYPES ET NORMES UNIQUEMENT.

CAUTION FOR CONTINUED PROTECTION AGAINST FIRE, HAZARD REPLACEMENT FUSES SHOULD BE OF THE SAME TYPE AND RATINGS ONLY.

T1.25A

POWER CORD
AC220V / 50Hz

To SP TERMINAL SCREW

MONI TAPE2 REC MONI TAPE1 REC VCR L R CD L R PHONO L R ANTENNA

POWER SUPPLY PROTECTION

POWER AMP

FUNCTION +12V

TC9154N

PHONO EQ

AN7470P

MPX

AWZ-2391

FM/AM IF

LA1265S

AN1288-D

LM7001

POWER SW assembly

Q2 Q4 Q3 Q1

A B C D

7 8 9 10 11 12 42

COMPLEX assembly(AWZ2391)

POWER SW assembly

POWER CORD
AC220V / 50Hz

ATTENTION POUR LES
PRECAUTIONS CONTINUELLES
CONTRE L'INCENDIE LESFUSIBLES
A REMPLACER DOIVENT ETRE LES
MEME TYPES ET
NORMES

CAUTION FOR CONTINUED
PROTECTION AGAINST FIRE
REPLACE FUSES ONLY
WITH SAME TYPE AND
RATING

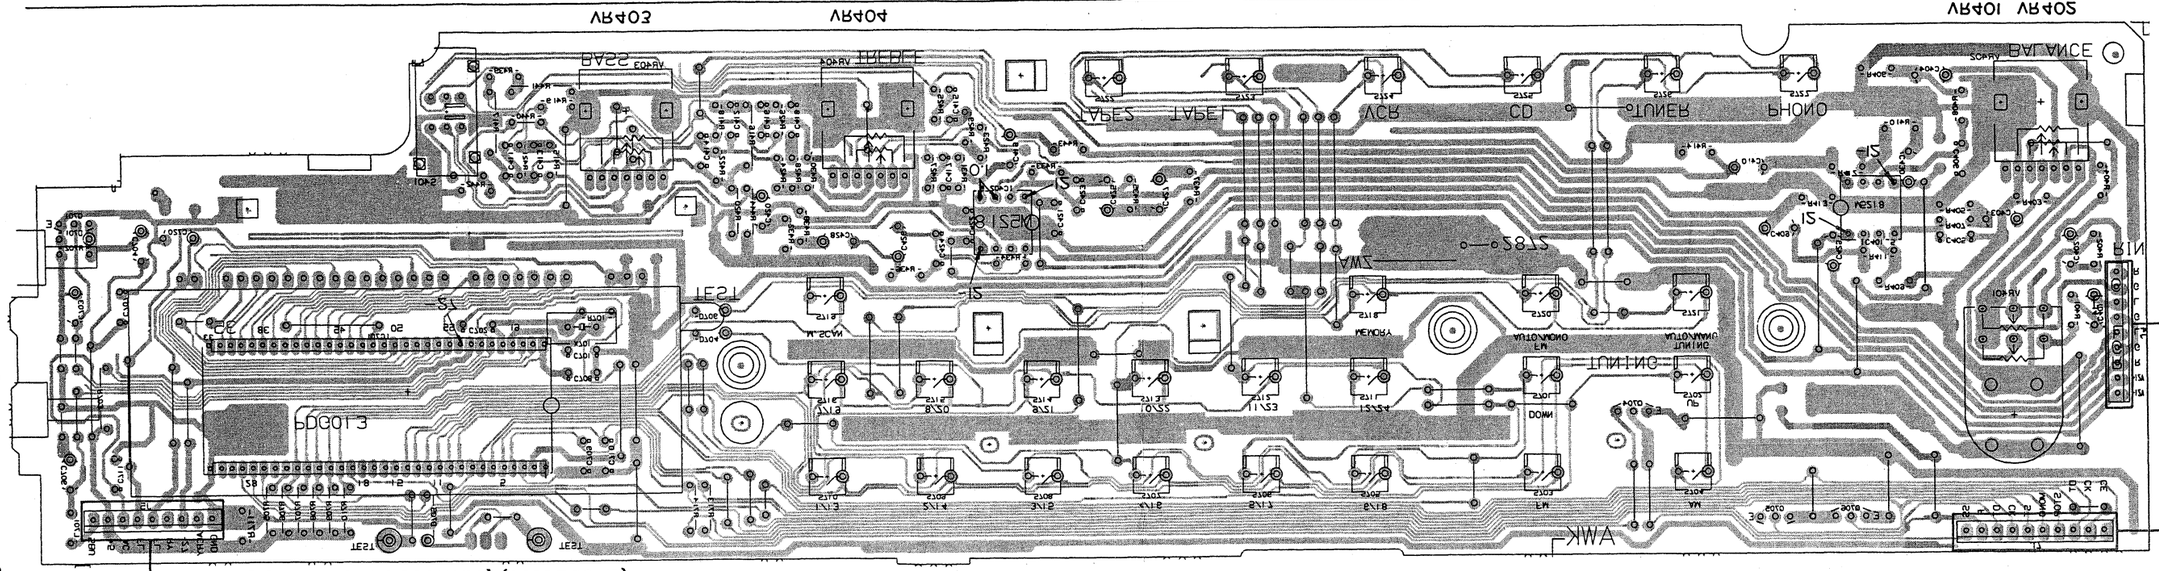
CONTROL assemply(AWZ2815)
FDC013
TEST
SI
TAPE2
TAPE1
VCR
CD
TUNER
PHONO
BALANCE
TUNING
MEMORY
DOWN
UP
MIN
MAX
VOLUME
BASS
TREBLE
VOLUME
BALANCE
AR401
AR402
AR403
IC401
IC402
IC701
Q701
Q702
Q703
Q704
Q705
Q706
Q707
Q708
Q709
Q710
Q711
Q712
Q713
Q714
Q715
Q716
Q717
Q718
Q719
Q720
Q721
Q722
Q723
Q724
Q725
Q726
Q727
Q728
Q729
Q730
Q731
Q732
Q733
Q734
Q735
Q736
Q737
Q738
Q739
Q740

8. PANEL FACILITIES

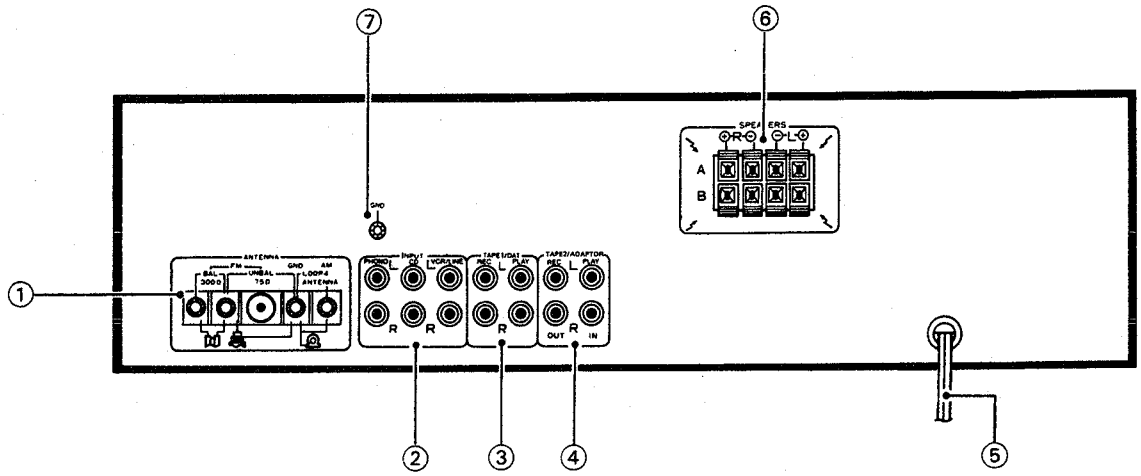

① FM/AM ANTENNA terminals
Use these antenna terminals for receiving FM and AM broadcasts.

② INPUT jacks
PHONO...Connect to the output cables from a turntable.
CD...Connect to the output jacks of a compact disc player.
VCR/LINE...Connect to the output jacks of a video cassette recorder, etc.

③ TAPE 1/DAT jacks
Connect these jacks to a cassette deck or digital audio tape deck (DAT).

④ TAPE 2/ADAPTOR jacks
Connect these jacks to a cassette deck or Audio Adaptor.

⑤ Power cord

⑥ SPEAKERS terminals
A: Connect to a first set of speakers.
B: Connect to a second set of speakers.

⑦ GND terminal
Connect to the ground lead of a turntable.

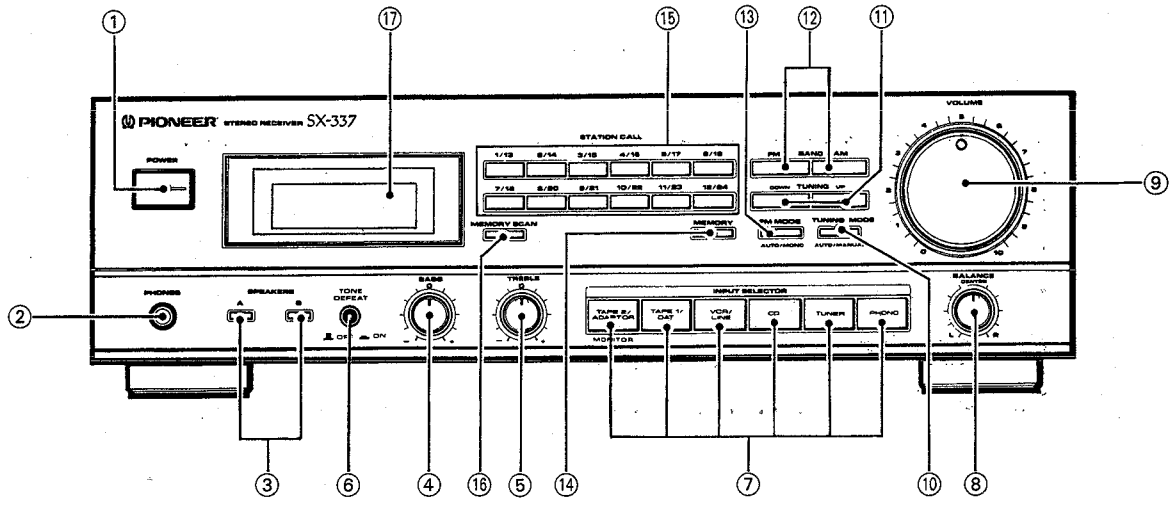

① POWER switch
When this switch is pressed, power is supplied to the unit. Press the switch again to turn power off.

② PHONES jack
Connect the plug on your headphones to this jack. To listen to a program through the headphones only, set both SPEAKERS A and B switches to the OFF position.

③ SPEAKERS switches (■ off , ▬ on)
These are used to select the speaker through which you wish to listen.
A: When the speakers connected to A terminals are in use.
B: When the speakers connected to B terminals are in use.
- Turn both A and B speakers to off position when only the headphones are in use.

④ BASS tone control
Use to adjust the low-frequency tone.
The center position is the "0" (normal) position. When moved to the right, low-frequency tones are emphasized; when moved to the left, low-frequency tones are de-emphasized.

⑤ TREBLE tone control
Use to adjust the high-frequency tone.
The center position is the "0" (normal) position. When moved to the right, high-frequency tones are emphasized; when moved to the left, high-frequency tones are de-emphasized.

⑥ TONE DEFEAT Switch (■OFF, ▬ON)
ON: In this position, the input signal is not adjusted by the BASS and TREBLE controls, resulting in an unequalized, or flat sound.
OFF: In this position, the BASS and TREBLE controls can be used to adjust the sound.

⑦ INPUT SELECTOR switches
Use to select playback source.
[TAPE 1/DAT]—Press when listening to tape playback with a cassette deck or digital audio tape deck (DAT).
[VCR/LINE] — Press when listening to programs from a component connected to the VCR/LINE terminals.
[CD] — Press when listening to compact disc playback with a CD player.
[TUNER] — Press when listening to AM or FM broadcasts with a tuner.
[PHONO] — Press when listening to record playback on a turntable.

MONITOR switch
[TAPE 2/ADAPTOR]—Press when listening to tape playback with a cassette deck or when using a graphic equalizer.

⑧ BALANCE control
Should normally be left in the center position. Adjust balance if sound is louder from one of the speakers. If the right side is louder, turn toward L position and if the left side louder, turn toward R position.

⑨ VOLUME control
Use to adjust volume level.

⑩ TUNING MODE AUTO/MANUAL switch
Works during FM reception.
Use this switch to select either the AUTO mode or the MANUAL mode.
When the "AUTO" indicator is lit, the receiver is in the AUTO mode.

⑪ TUNING switches (DOWN, UP)
UP: The FM or AM band is scanned in the direction of increasing frequency.
DOWN: The FM or AM band is scanned in the direction of decreasing frequency.

⑫ BAND selector switches
These switches are used to select either AM or FM reception.
AM: Push this switch for AM reception.
FM: Push this switch for FM reception.

⑬ FM MODE AUTO/MONO selector switch
Use to select the auto stereo mode or monaural mode when listening to FM broadcasts.
Auto stereo mode:
Normally leave in this mode for reception. When a stereo FM broadcast is received, it will be automatically reproduced in stereo sound.
Monaural mode:
When receiving distant stations or stations with weak broadcast signals, the input signal may be weak, thus resulting in increasing noise during FM stereo broadcasts. In this event, setting the receiver to the monaural mode will reduce the noise. In this case, however, FM stereo broadcasts will be reproduced in monaural sound.
The monaural mode has been selected when the FM MONO indicator is lit.

NOTE:
This switch has no effect on reception of AM broadcasts.

⑭ MEMORY switch
This is used to memorize stations. When the switch is pressed, the frequency indicator will flash. To memorize the frequency of any station, press a STATION CALL switch while the frequency indicator is flashing.

⑮ STATION CALL switches
These switches are used to preset and recall desired broadcasting stations.

⑯ MEMORY SCAN switch
Press this switch to scan the stations in the memory.
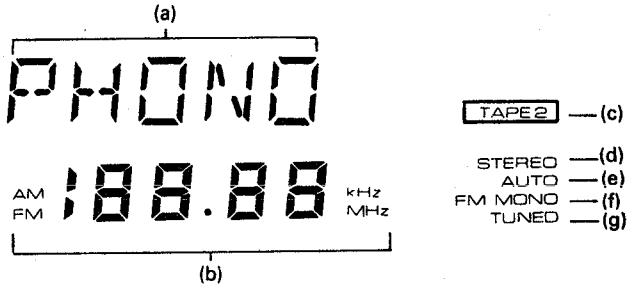
⑰ OPERATION DISPLAY panel
(a) Indicates the function selected by the INPUT SELECTOR.
(b) Indicates frequency or channel (STATION CALL number).
(c) Indicates TAPE 2 monitor
(d) FM STEREO indicator
(e) AUTO tuning indicator
(f) FM MONO indicator
(g) TUNED indicator